



River Hobby

 


Артикул RGC-0001



Артикул RGC-0002

 
 
## Передняя подвеска

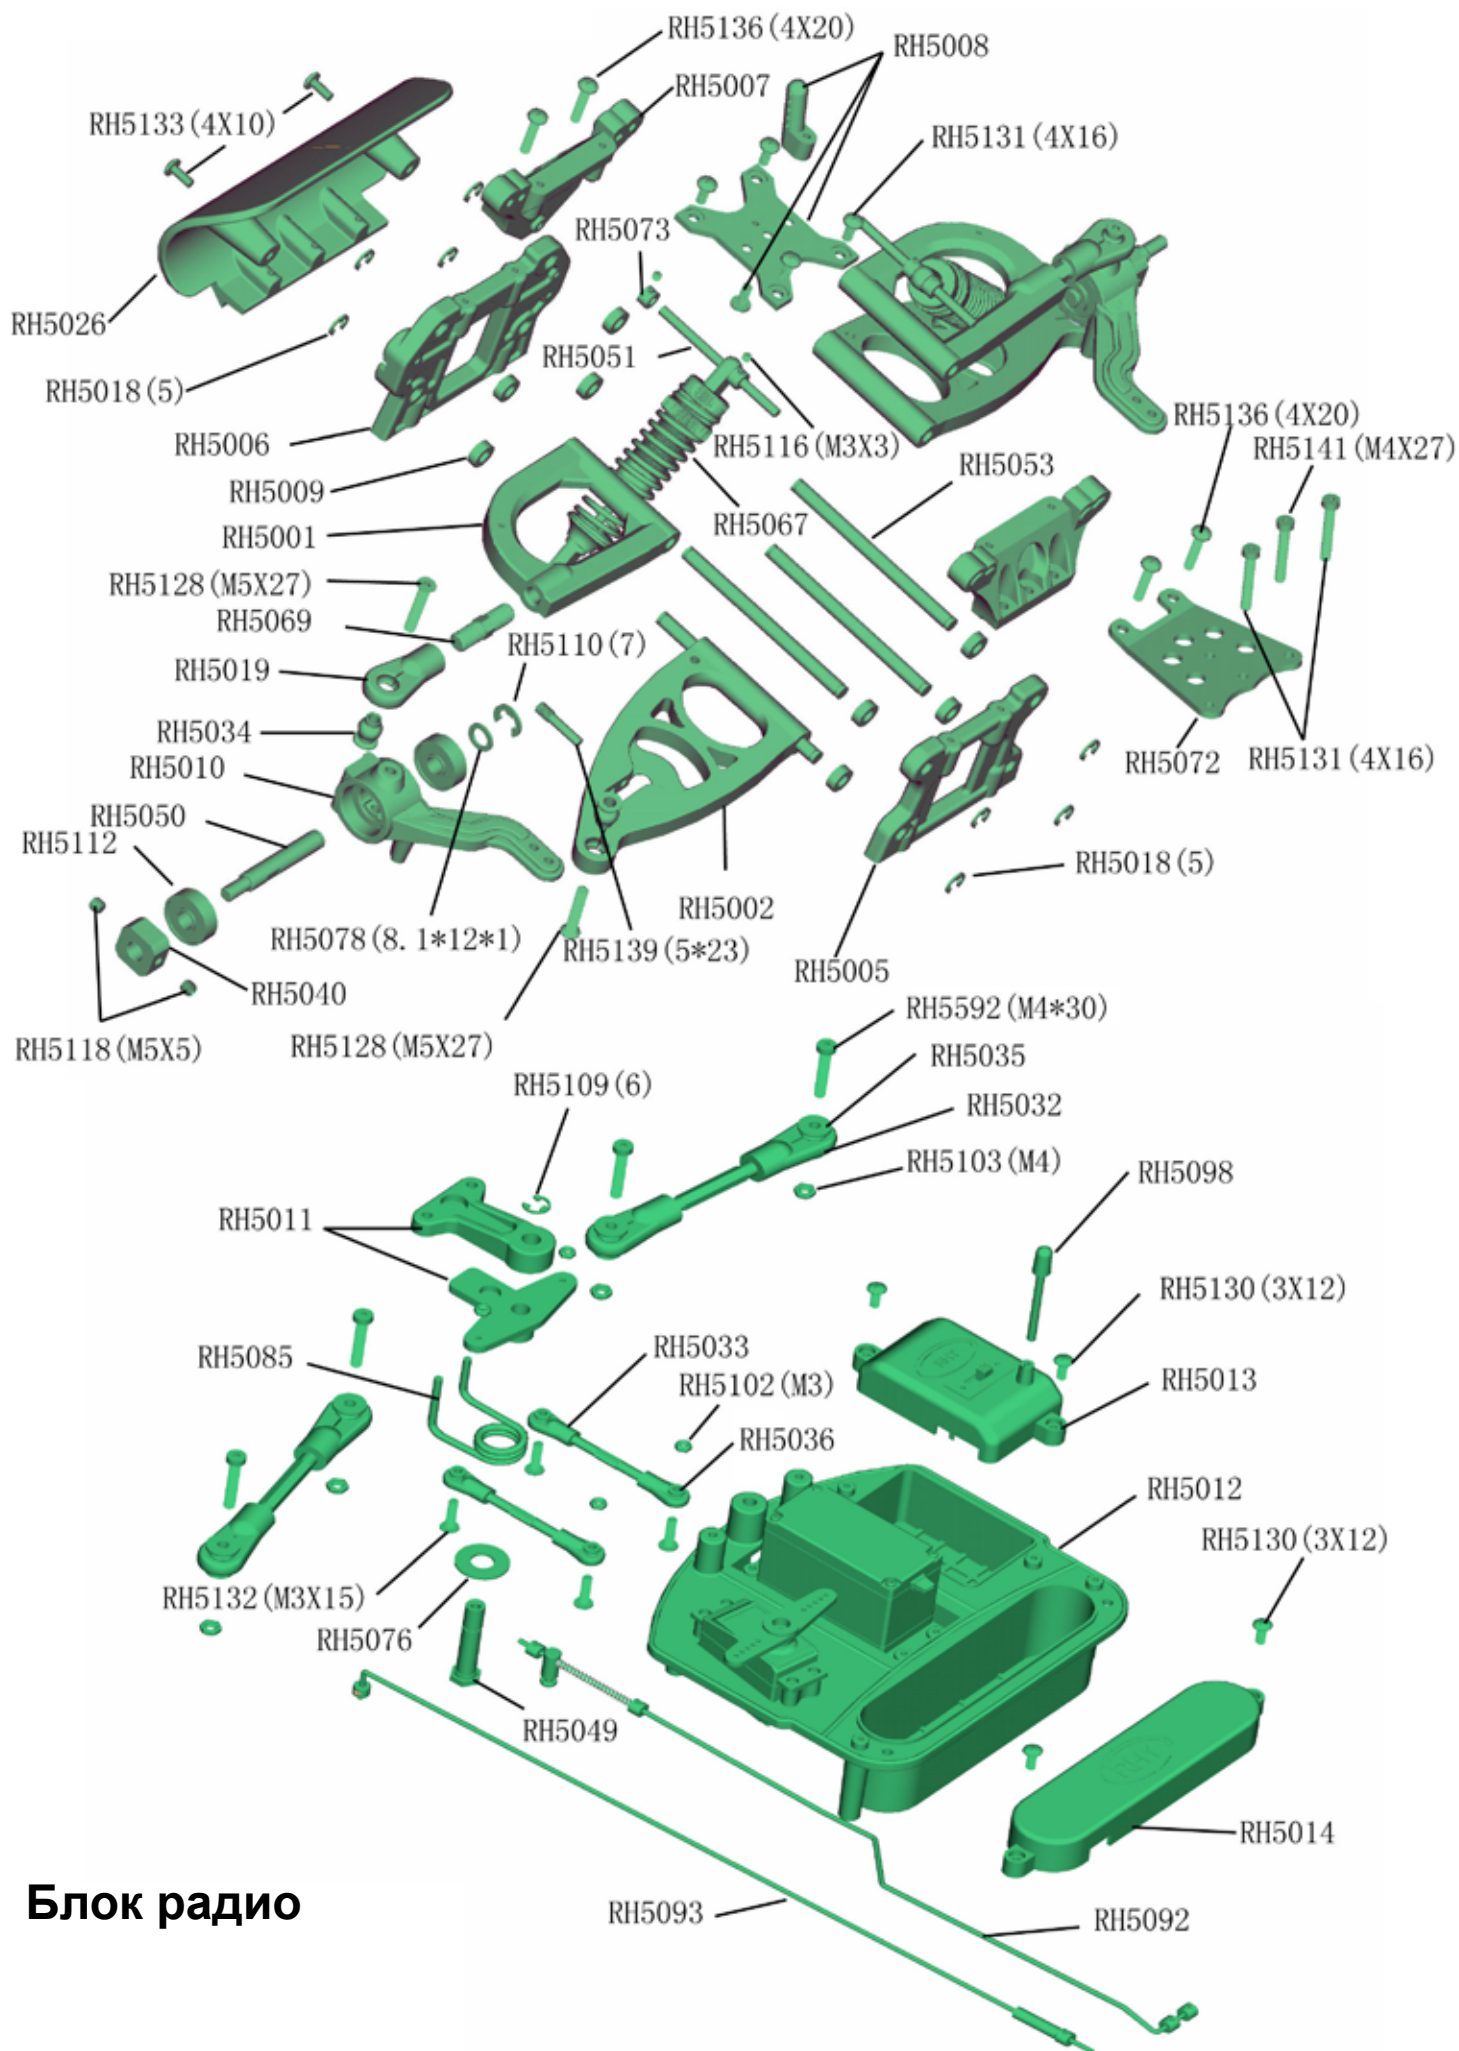 


## Блок радио



 
# Задняя подвеска

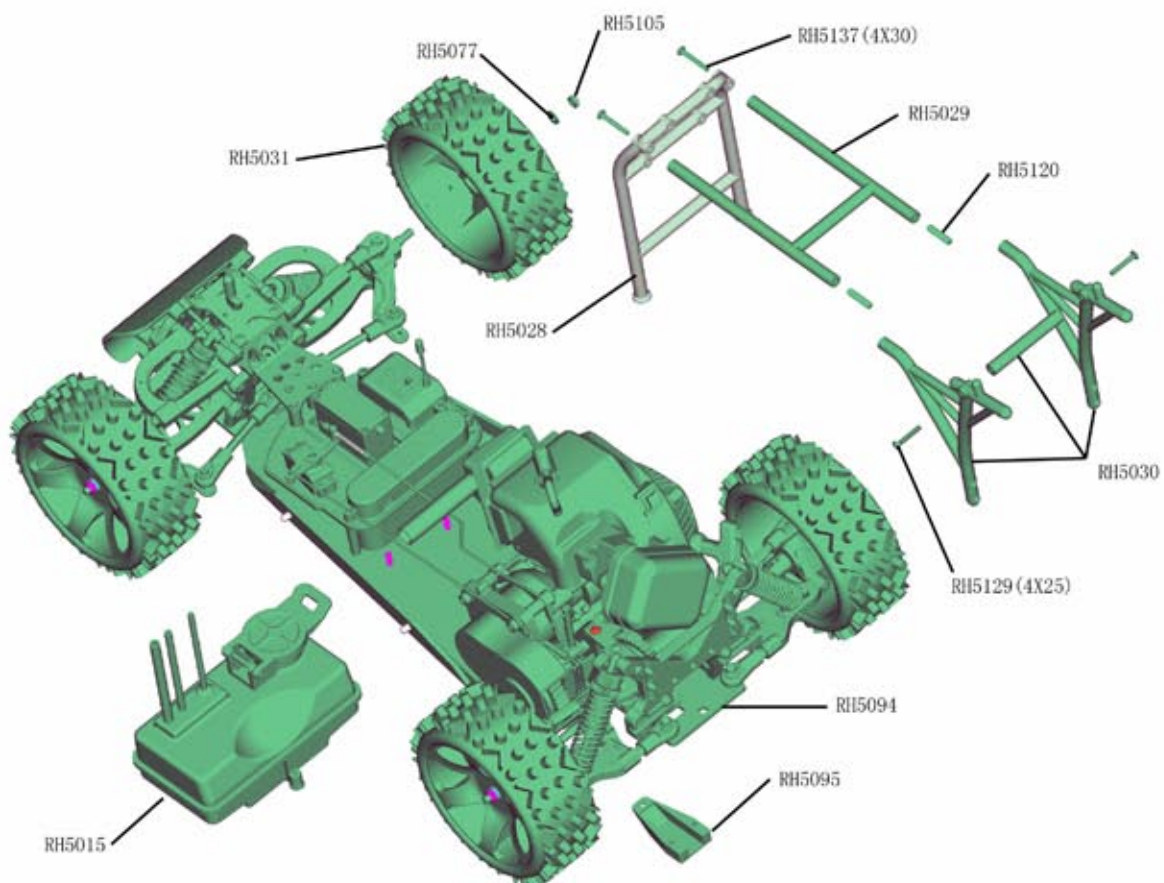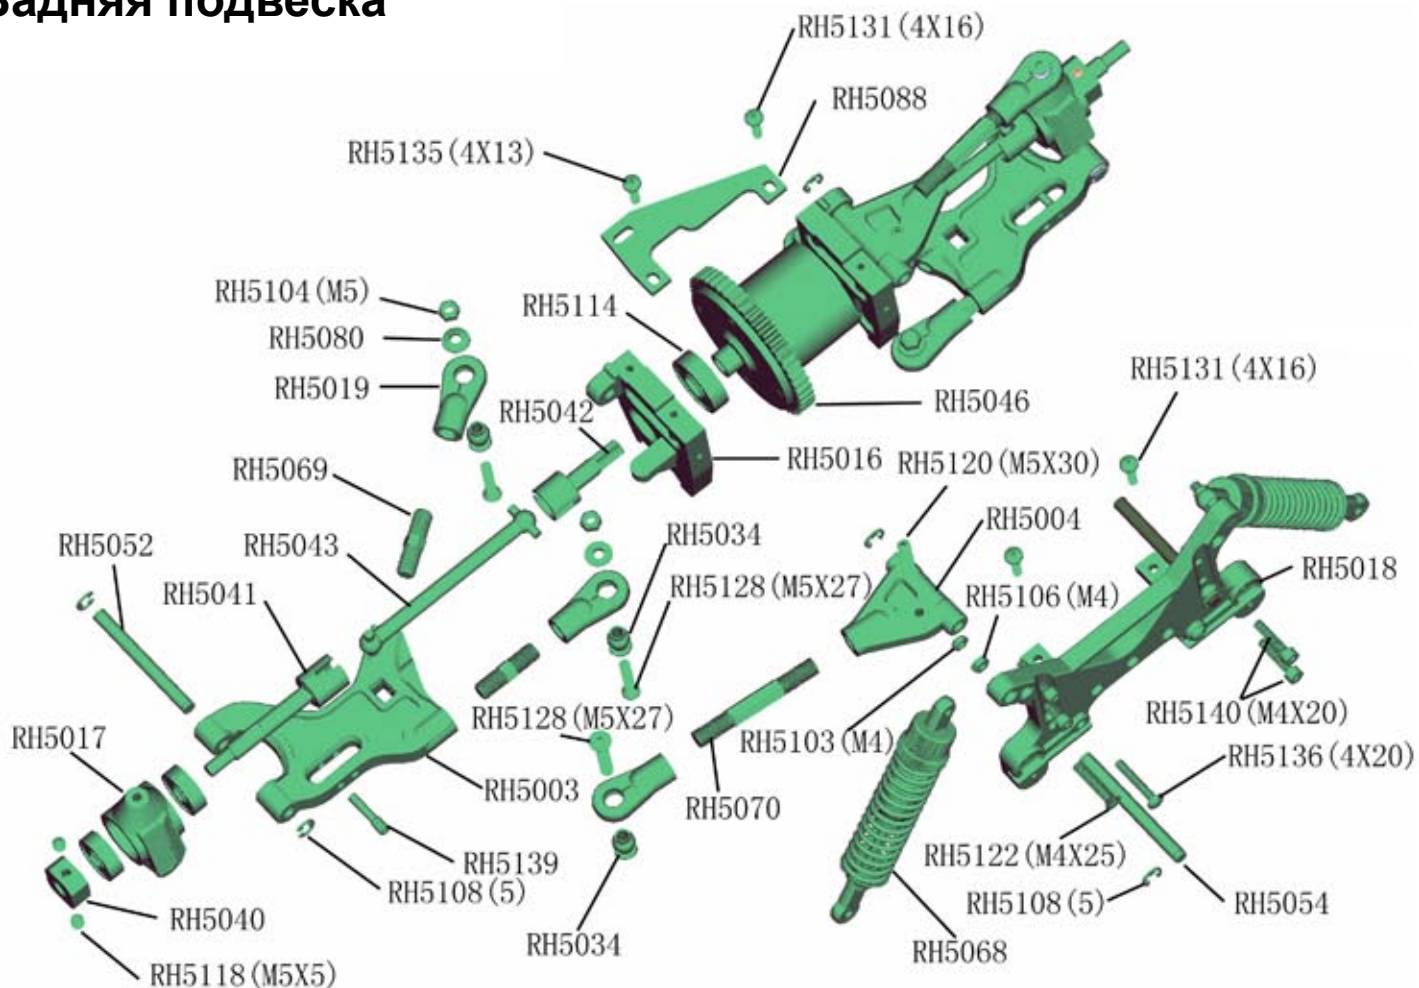
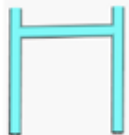 

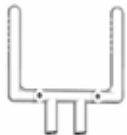 


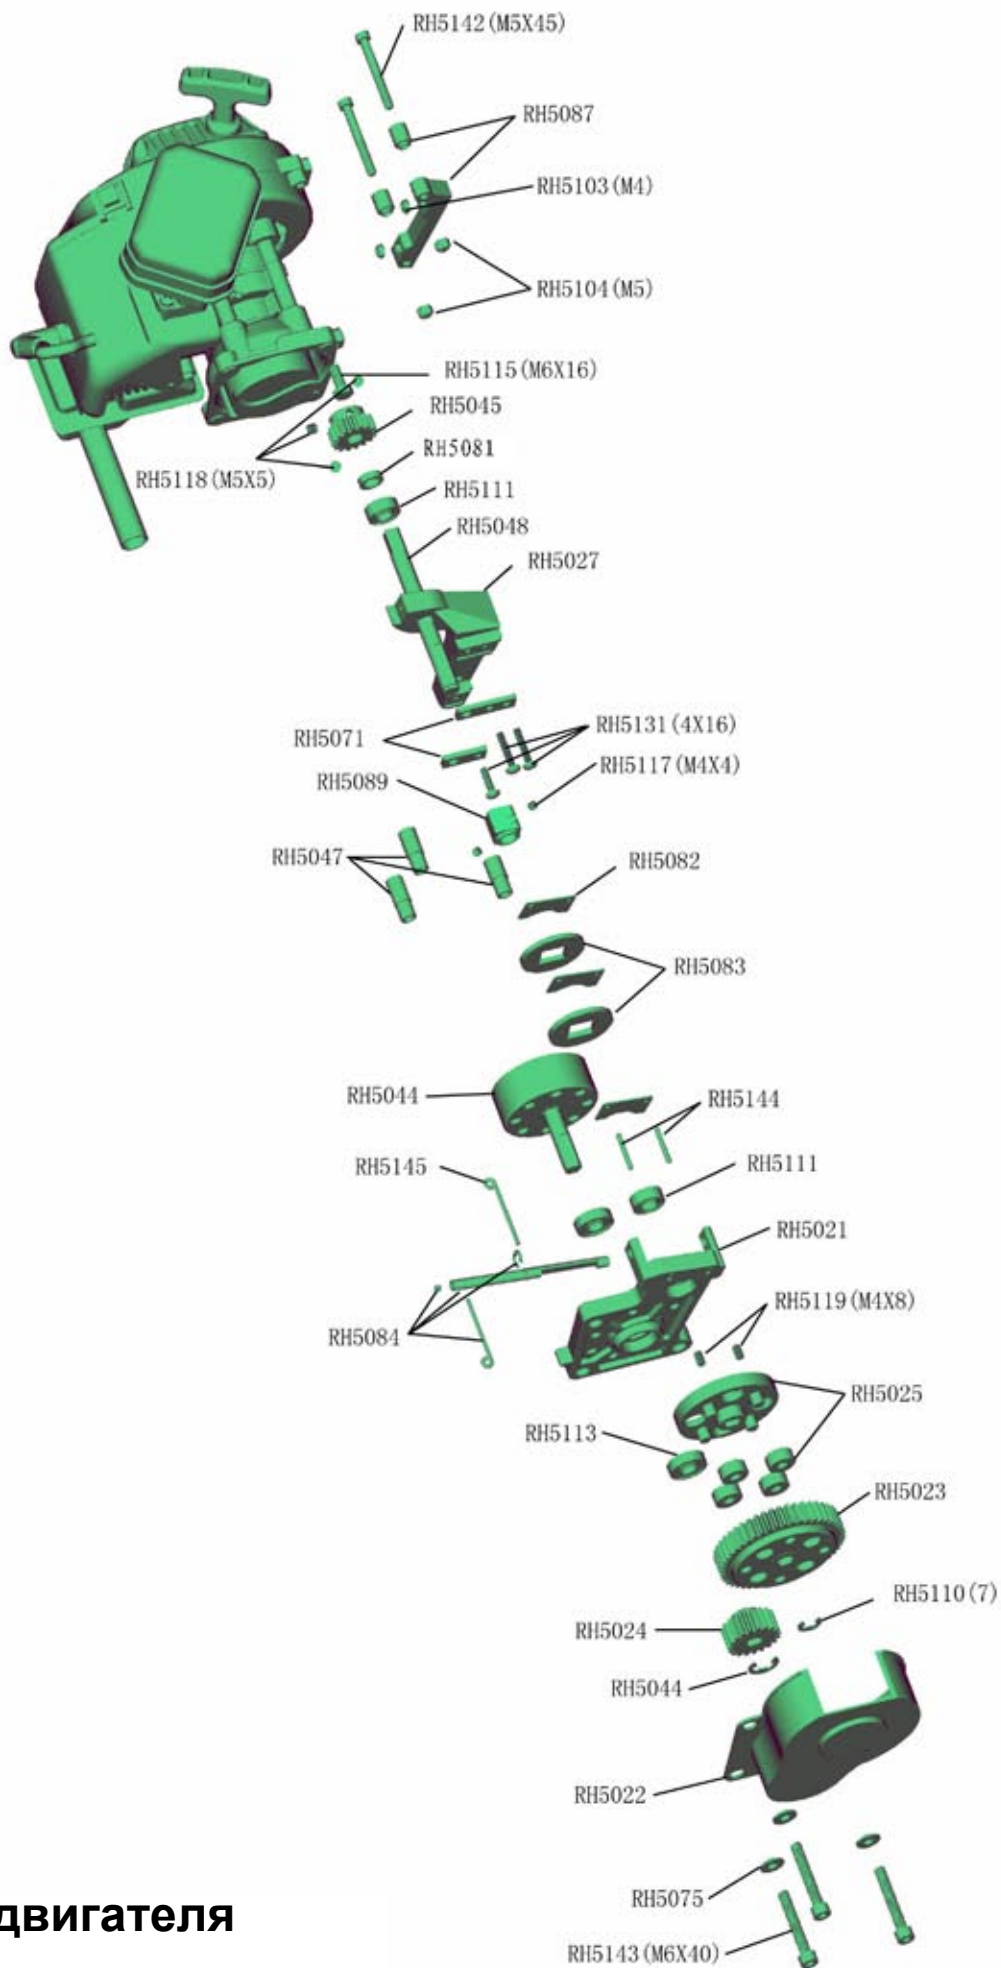



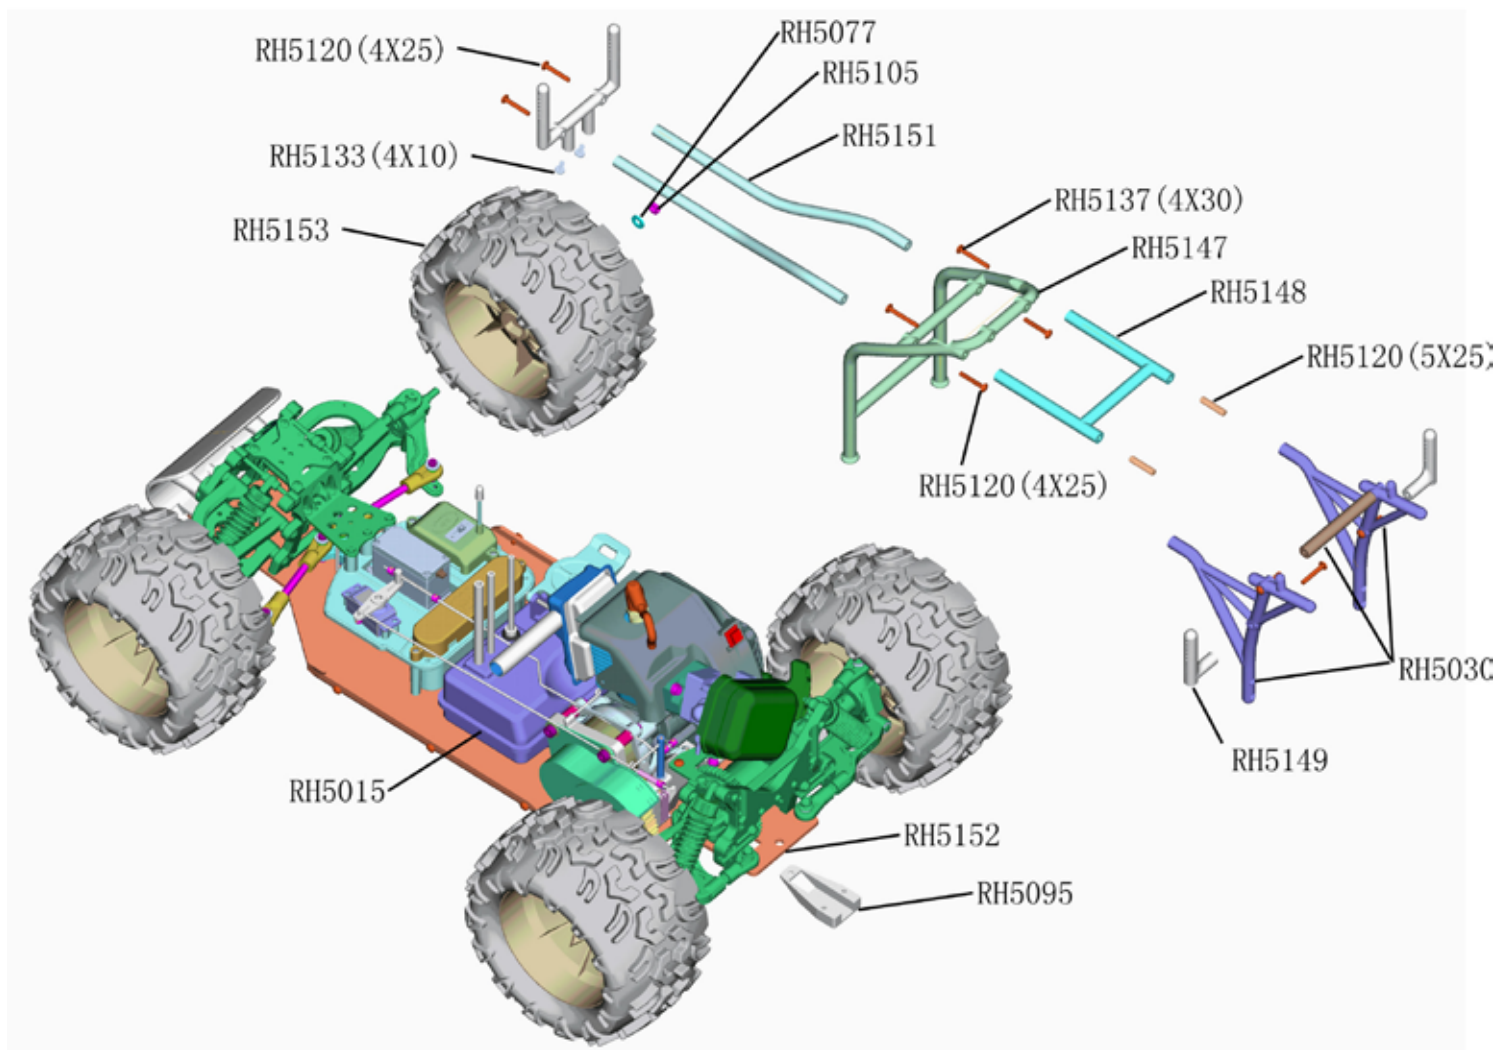


**Детали двигателя**

# Дополнительные детали для Трагги



<p>RH5147-Shed A 1P</p> 	<p>RH5148-Rear shed connecting rod 1P</p> 	<p>RH5149-Rear body supporting rod 2P</p> 	<p>RH5150-Front body shell bracket 1P</p> 	<p>RH5151-Front body shell connecting rod 2P</p> 
<p>RH5152-Chassis 1P</p> 	<p>RH5153-Tire units 2set</p> 	<p>RH5154-instruction manual 1p</p>	<p>RH5155-Body shell 1P</p>	<p>RH5156-Tire 2P</p> 
<p>RH5157-Wheel Rim 2P</p> 				



 
# Бензиновый двигатель 30 см<sup>3</sup>


30005 (поршневая группа)







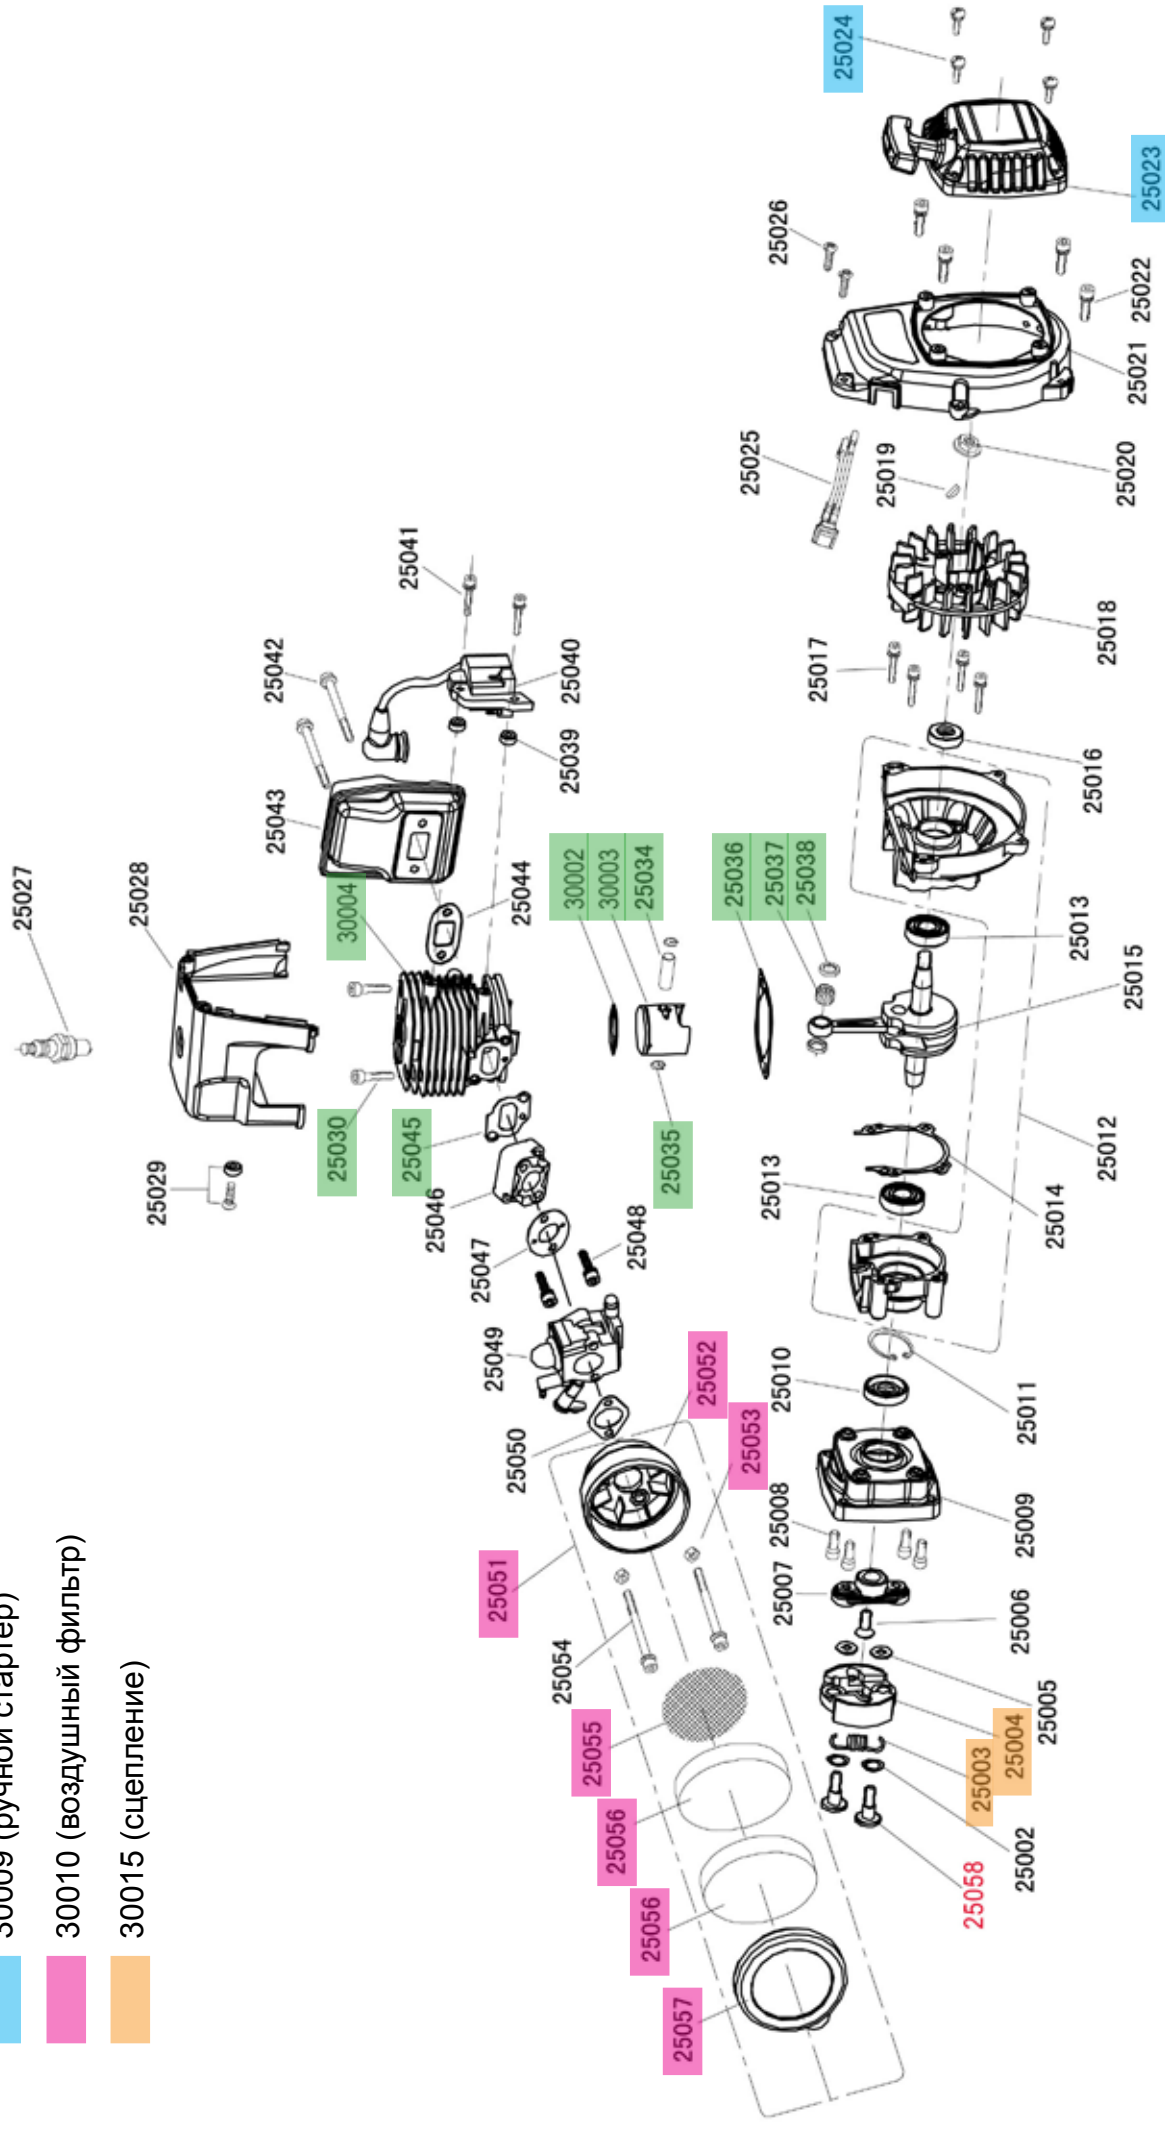

































30009 (ручной стартер)

30010 (воздушный фильтр)












 


 










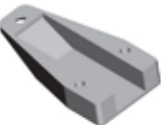














30015 (сцепление)




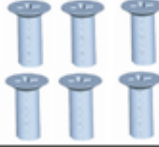 






















 


RH5001-Front upper susp arm 2P 	RH5002-Front lower susp arm 2P 	RH5003 -Rear lower susp arm 2P 	RH5004-Rear upper susp arm 2P 	RH5005-Front lower back supporting plate 1p 
RH5006-Front lower supporting plate 1P 	RH5007-Front upper supporting plate 1P 	RH5008-Front body shell bracket 1set 	RH5009-Bearing bush 8P 	RH5010-Steering arm 1set 
RH5011-Steering units 1set 	RH5012-Servo bearer 1P 	RH5013-Receiver case 1set 	RH5014-Battery case cover 1P 	RH5015-Fuel tank completes 1set 
RH5016-Gear holder units 1set 	RH5017-Rear axle sleeve units 1set 	RH5018-Rear supporting plate 1P 	RH5019-Susp arm fixed holder 8P 	RH5020-Diff gear box 1P 
RH5021-Gear fixing plate 1P 	RH5022-Gear cover 1P 	RH5023-Gear 48T 1P 	RH5024-Gear 19T 1P 	RH5025-Gear dead plate 1set 
RH5026-Front damper 1P 	RH5027-Engine bracket left 1P 	RH5028-Shed A 1P 	RH5029-Rear shed connecting rod 1p 	RH5030-Rear body across supporting right 1set 
RH5031-Tire units 2set 	RH5032-Steering connecting rod 2set 	RH5033-Connect rod for servo 2set 	RH5034-Ball end for susp arm 4P 	RH5035 -Steering ball end 4P 
RH5036-Ball end for servo 4P 	RH5037-Driven diff. gear/w shaft 1set 	RH5038-Drive diff gear 1set 	RH5039-Outer diff. case cover 1P 	RH5040-Wheel rim coupler short 2P 

 






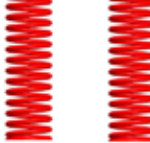



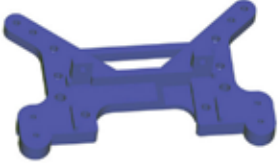







<p>RH5041-Rear wheel shaft 2P</p> 	<p>RH5042-Diff speed shaft of rear wheel 2P</p> 	<p>RH5043-Rear transverse drive shaft 2set</p> 	<p>RH5044-Flywheel 1set</p> 	<p>RH5045-Gear 16T 1P</p> 
<p>RH5046-Gear 48T 1P</p> 	<p>RH5047-Spacer sleeve 1set</p> 	<p>RH5048-Gear shaft 1P</p> 	<p>RH5049-Steering fixed rod 1P</p> 	<p>RH5050-Front wheel shaft 2P</p> 
<p>RH5051-Damper fixing shaft 2P</p> 	<p>RH5052-Rear rim fixing shaft 2P</p> 	<p>RH5053-Front upper and lower susp arm shaft 4P</p> 	<p>RH5054-Rear upper and lower susp arm shaft 2P</p> 	<p>RH5055-Axle for shock absorber 2P</p> 
<p>RH5056-Shock absorber spacer sleeve 4P</p> 	<p>RH5057-Upper bearer of shock absorber 4P</p> 	<p>RH5058-Upper cover of shock absorber 4P</p> 	<p>RH5059-Adjusting ring for shock absorber 4P</p> 	<p>RH5060-Fixing spring of shock absorber 4P</p> 
<p>RH5061-Sealing cap of shock absorber 4P</p> 	<p>RH5062-Piston of shock absorber 4P</p> 	<p>RH5063-Shock absorber cylinder 2P</p> 	<p>RH5064-Shock absorber cylinder 2P</p> 	<p>RH5065-Lower bearer for shock absorber 4set</p> 
<p>RH5066-Shock absorber spring 2P</p> 	<p>RH5067-Shock absorber units 2set</p> 	<p>RH5068-Shock absorber units 2set</p> 	<p>RH5069-Connecting rod front upper susp arm 2P</p> 	<p>RH5070-Connecting rod rear rpper susp arm 2P</p> 
<p>RH5071 -Fixing plate 1set</p> 	<p>RH5072-Front locating plate 1P</p> 	<p>RH5073-Set collar 4.14P</p> 	<p>RH5074-Set collar 2.1 4P</p> 	<p>RH5075-Gear case washer 3P</p> 
<p>RH5076-Steering rod washer 8.5*19.6*1.2 2P</p> 	<p>RH5077-Steering rod Washer 6.2*12*1.5 4P</p> 	<p>RH5078-Steering rod Washer 8.1*12*1 4P</p> 	<p>RH5079-Engine fixed slice 4P</p> 	<p>RH5080-Washer 4P</p> 



<p>RH5081-Gear bush 1P</p> 	<p>RH5082-Brake disc clamp slice 3P</p> 	<p>RH5083-Brake disc 2P</p> 	<p>RH5084-Brake crank 1set</p> 	<p>RH5085-Spring of servo saver 1P</p> 
<p>RH5086-Cy23cc engine 1P</p> 	<p>RH5087-Engine bracket 1set</p> 	<p>RH5088-Rear locating plate 1P</p> 	<p>RH5089-Fixed brake block 1P</p> 	<p>RH5090-fixed screw of car body 4P</p> 
<p>RH5091-oil pipe mounting cover 2et</p> 	<p>RH5092-Throttle linkage completes 1set</p> 	<p>RH5093-Brake linkage completes 1set</p> 	<p>RH5094-Chassis 1P</p> 	<p>RH5095-Gear cover 1p</p> 
<p>RH5096-battery 6V 1P</p> 	<p>RH5097-Big body pins</p> 	<p>RH5098-antenna pipe</p> 	<p>RH5099-oil pipe sets</p> 	<p>RH5100-instruction manual</p> 
<p>RH5101-Body shell 1P</p> 	<p>RH5102-nylon lock nut M3 6P</p> 	<p>RH5103-nylon lock nut M4 6P</p> 	<p>RH5104-nylon lock nut M5 6P</p> 	<p>RH5105-nylon lock nut M6 6 P</p> 
<p>RH5106-Nut cap M4 6P</p> 	<p>RH5107-E-ring 3 6P</p> 	<p>RH5108-E-ring 5 6P</p> 	<p>RH5109-E-ring 6 6 P</p> 	<p>RH5110-E-ring 7 6P</p> 
<p>RH5111-ball bearing 10*19*7 2P</p> 	<p>RH5112-Ball bearing 8*22*7 2P</p> 	<p>RH5113-Ball bearing 10*22*6 2P</p> 	<p>RH5114-Ball bearing 12*28*8 2P</p> 	<p>RH5115-outer hex screw M6*16 2P</p> 
<p>RH5116-Inner hex grub screw M3 6P</p> 	<p>RH5117-Inner hex grub screw M4 6P</p> 	<p>RH5118-Inner hex grub screw M5 6P</p> 	<p>RH5119-Inner hex grub screw M4*8 2P</p> 	<p>RH5120-Inner hex grub screw M5*30 2P</p> 

<p>RH5121-flat head cross screw M4*16 6p</p> 	<p>RH5122-flat head cross screw M4*25 6P</p> 	<p>RH5123 -flat head cross tapping screw 4*16 6P</p> 	<p>RH5124-flat head cross tapping screw 4*18 6P</p> 	<p>RH5125-flat head cross tapping screw M3*10 6P</p> 
<p>RH5126-Flat inner hex screw M5*10 6P</p> 	<p>RH5127-flat head cross screw M4*8 6P</p> 	<p>RH5128-Flat inner hex screw M5*27 6P</p> 	<p>RH5129-Round head cross tapping screw 4*25 6P</p> 	<p>RH5130-Round head cross tapping screw 3*12 6P</p> 
<p>RH5131-Round head cross tapping screw 4*16 6P</p> 	<p>RH5132-Round cross screw M3*15 6P</p> 	<p>RH5133-Round head tapping screw 4*10 6P</p> 	<p>RH5134-Umbrella head tapping screw 3*6 6P</p> 	<p>RH5135-Round head tapping screw 4*13 6P</p> 
<p>RH5136-Round cross screw 4*20 6P</p> 	<p>RH5137-Round cross screw 4X30 6P</p> 	<p>RH5138-Flange head screw M2.6*15 6P</p> 	<p>RH5139-Shock absorber fixing screw 6P</p> 	<p>RH5140-Round column inner hex screw M4*20 6P</p> 
<p>RH5141-Round column hex screw M4*27 6P</p> 	<p>RH5142-Round column inner hex screw M5*45 6P</p> 	<p>RH5143-Round column inner hex screw M6*40 6P</p> 	<p>RH5144-fixed pin of brake slice unit 2P</p> 	<p>RH5145-located pin of throttle piling lever 1P</p> 
<p>RH5146-Axle for shock absorber 2P</p> 	<p>RH5169-Rear Shock Spring 2pcs</p> 			

# Upgrade

 <p>RH5201 Rear Supporting Plate 1pc</p>	 <p>RH5202 Gear Fixing Plate 1pc</p>	 <p>RH5203 Gear Holder L/R 1pair</p>	 <p>RH5204 Front Lower Back Supporting Plate 1pc</p>
 <p>RH5205 Front Lower Supporting Plate 1pc</p>	 <p>RH5206 Steering Units 1set</p>	 <p>RH5207 Engine Bracket Left 1pc</p>	 <p>RH5208 Front Lower Susp. Arm 1pc</p>
 <p>RH5209 Steering Arms 1pc</p>	 <p>RH5210 Front Body Shell Bracket</p>	 <p>RH5211 Rear Upper Susp. Arm 1pc</p>	 <p>RH5212 Rear Lower Susp. Arm 1pc</p>
 <p>RH5213 Gear Dead Plate 1pc</p>	 <p>RH5214 Diff Gear Box</p>	 <p>RH5215 Front Upper Susp. Arm 1pc</p>	 <p>RH5216 Front Upper Supporting Plate 1pc</p>
 <p>RH5217 Rear Axle Sleeve unit 1set</p>	 <p>RH5218 Gear 48T 1pc</p>	 <p>RH5219 Gear 19T 1pc</p>	