



River Hobby

 


Артикул RGC-0004




Артикул RGC-0003



## Детали амортизатора

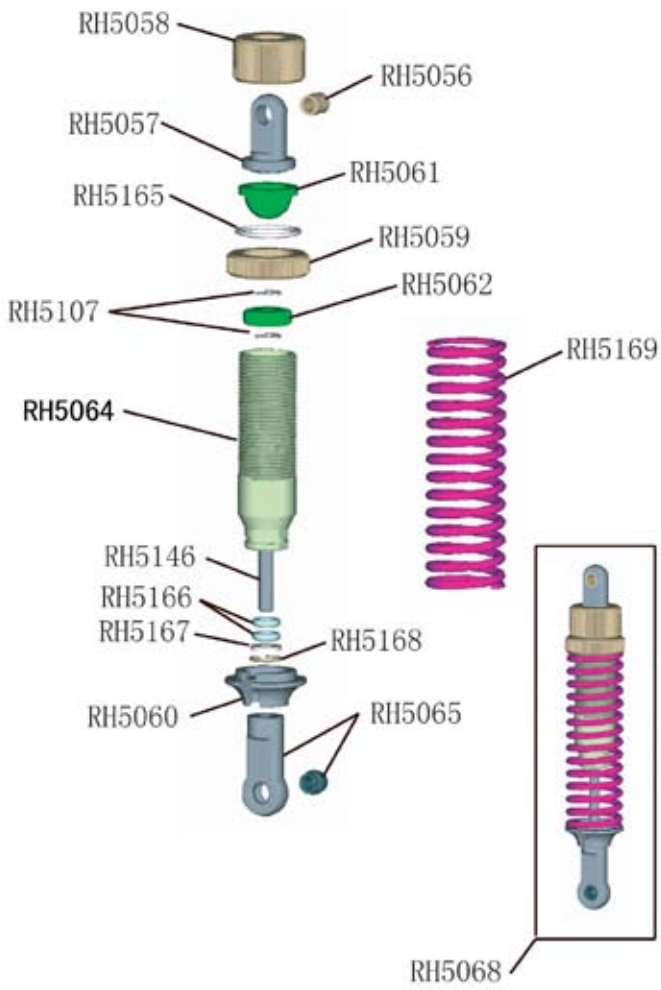


## Детали дифференциала

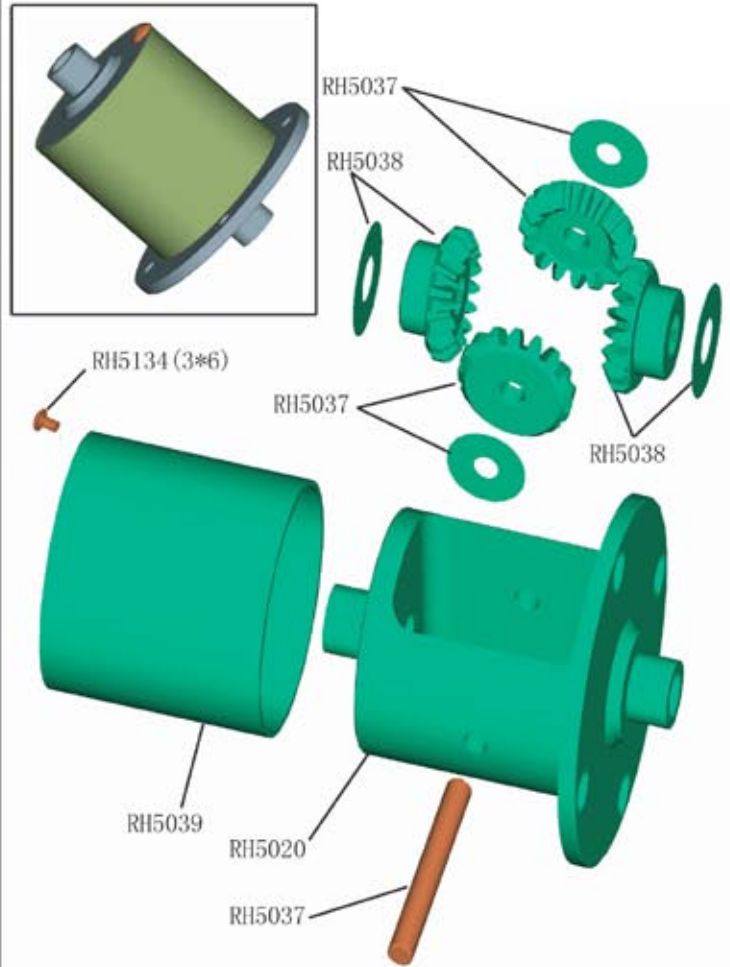 



## Детали центральной трансмиссии

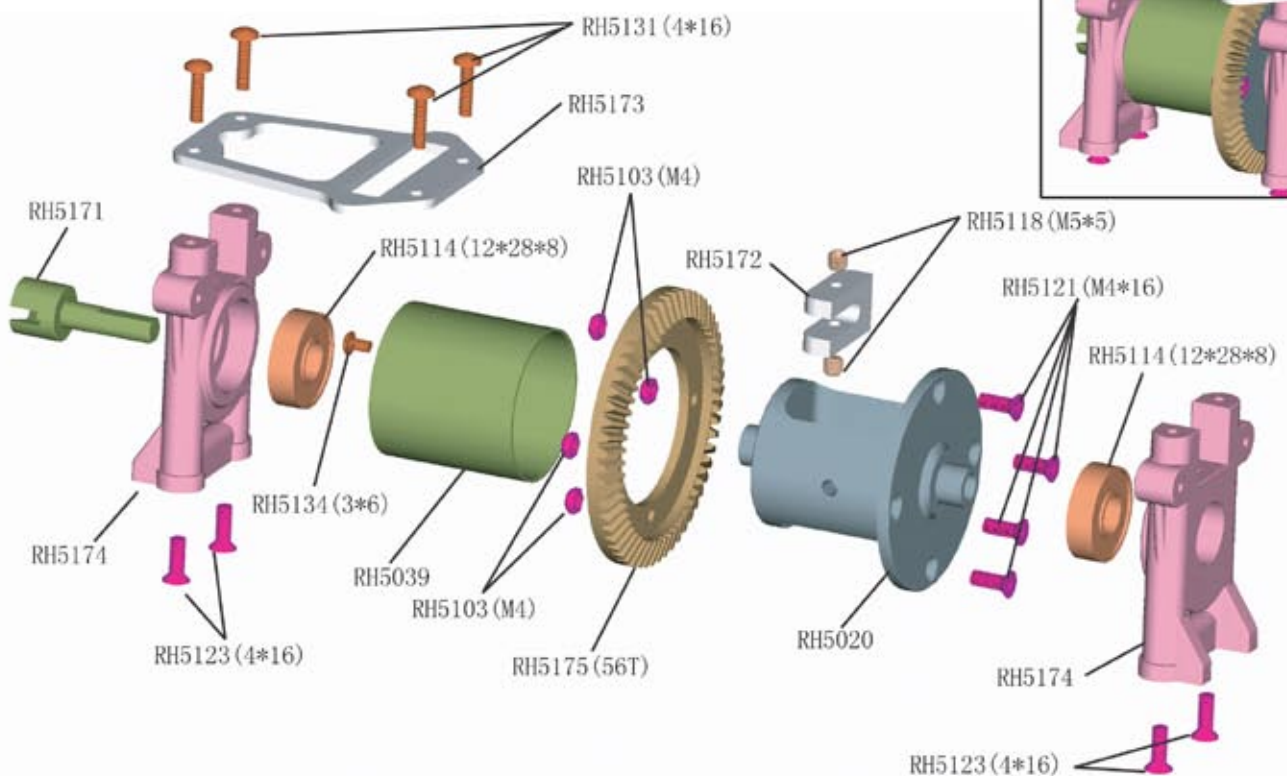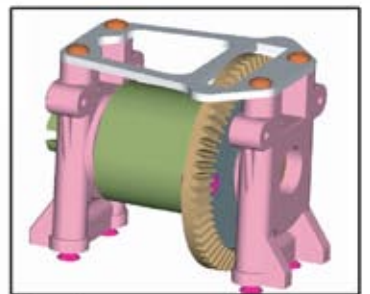  



## Передняя подвеска

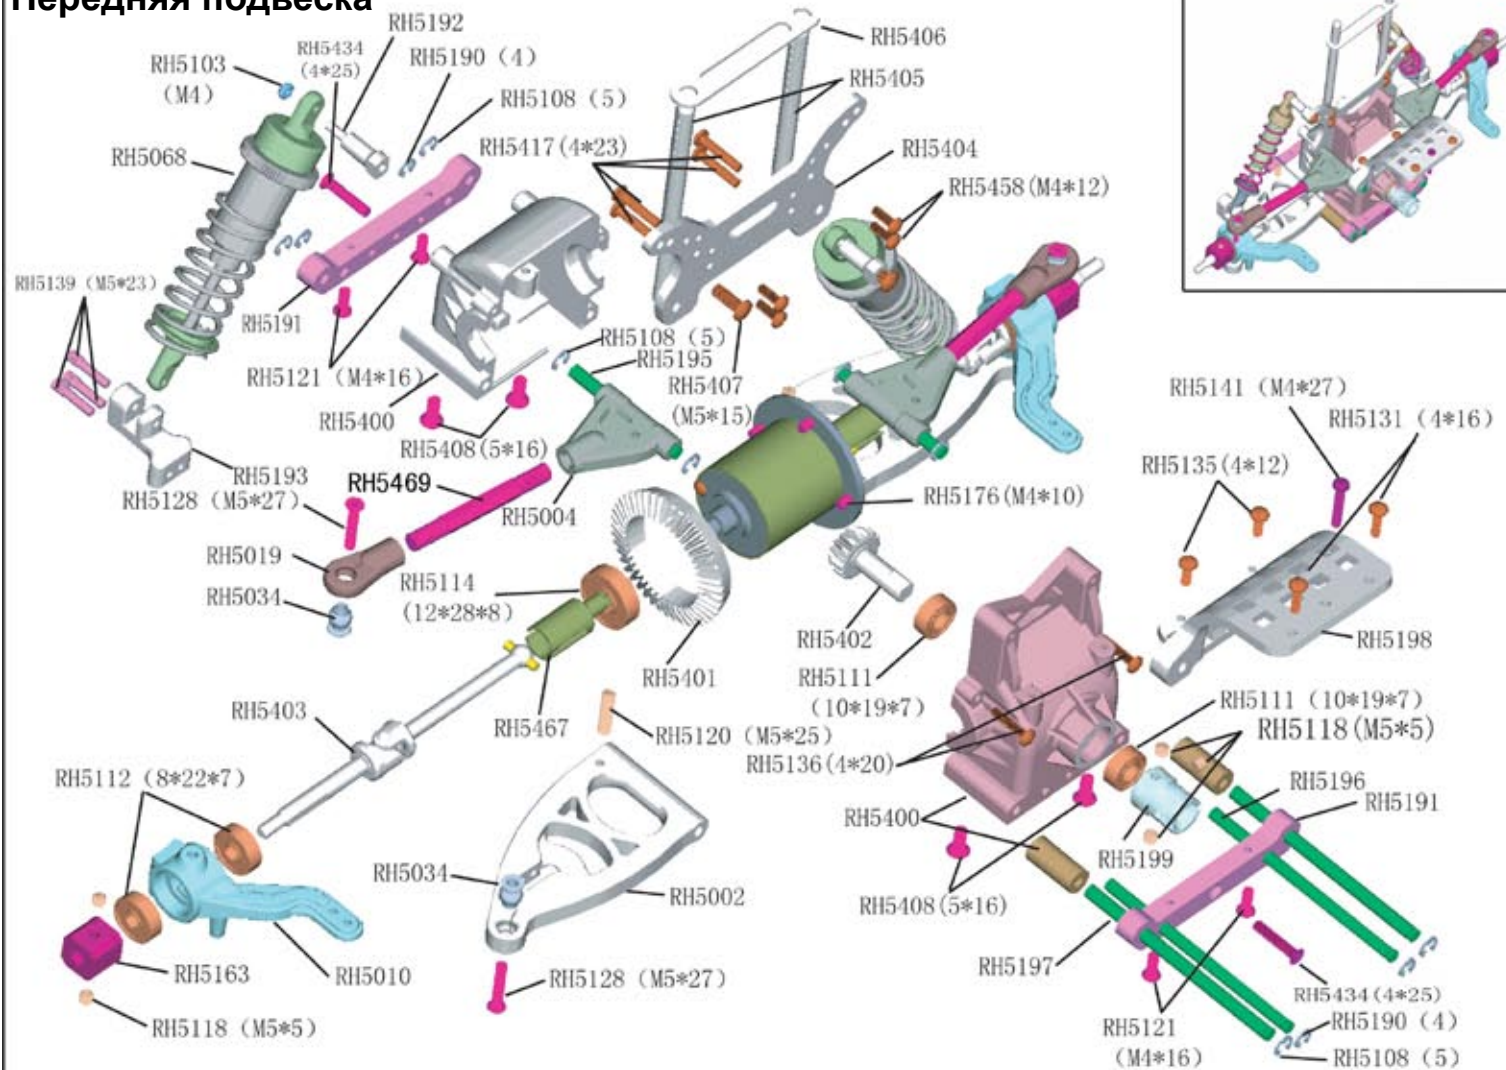 


## Задняя подвеска

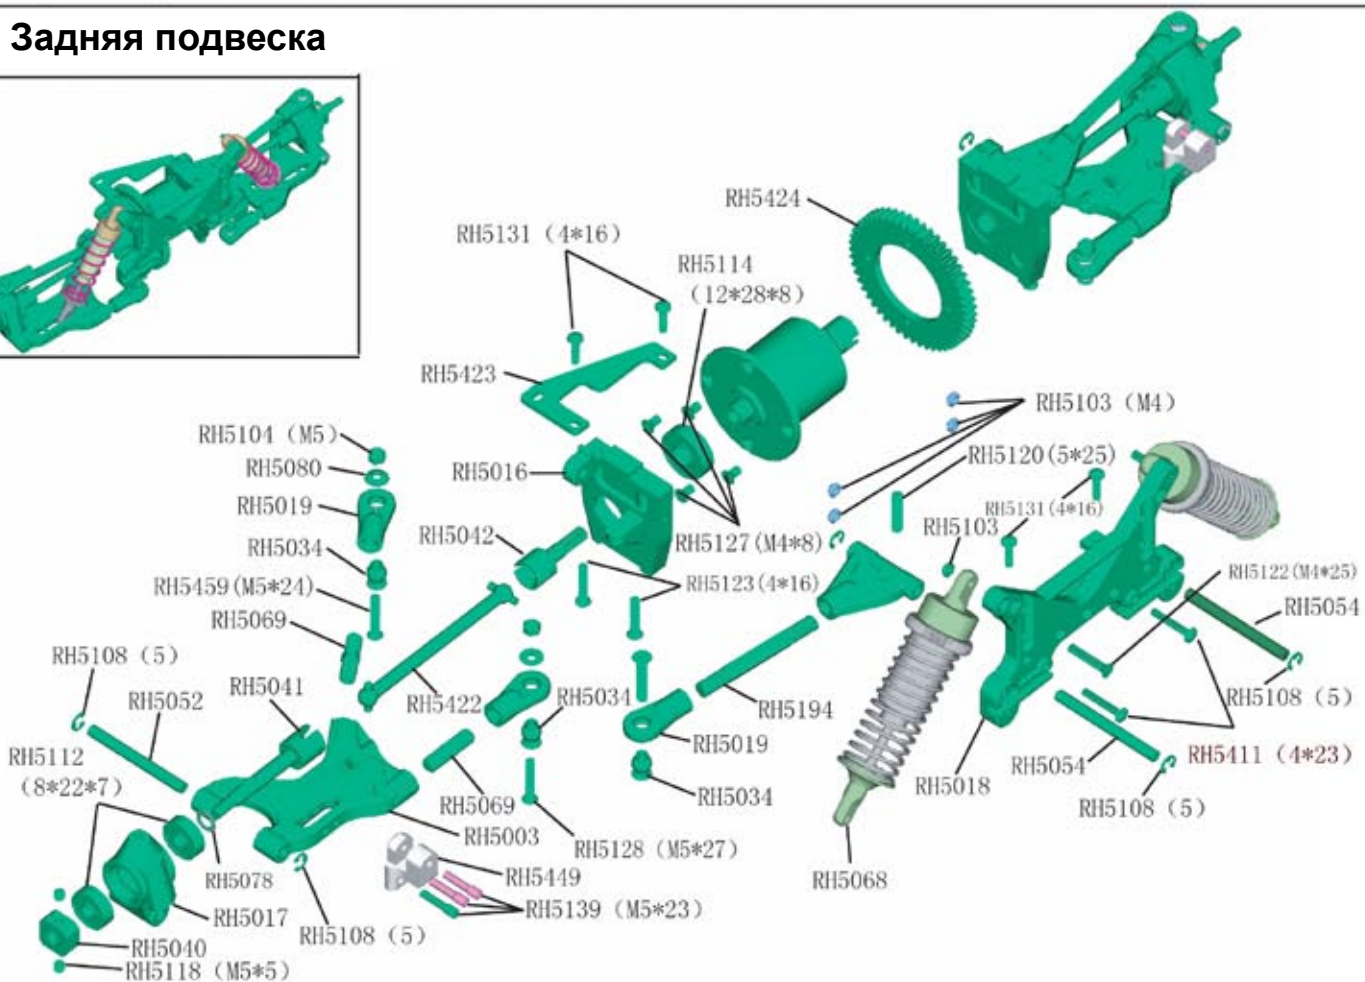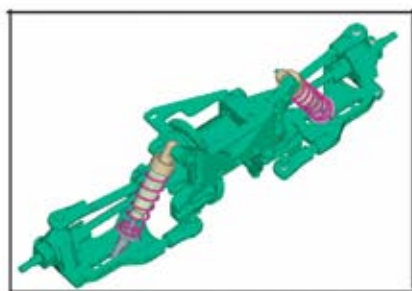  


# Детали двигателя

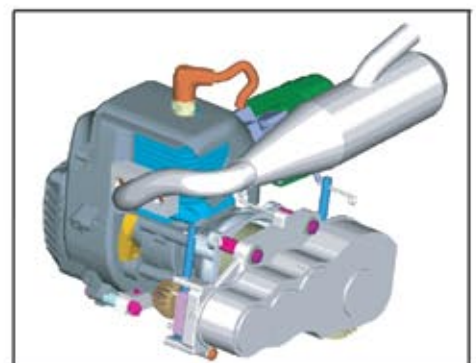 
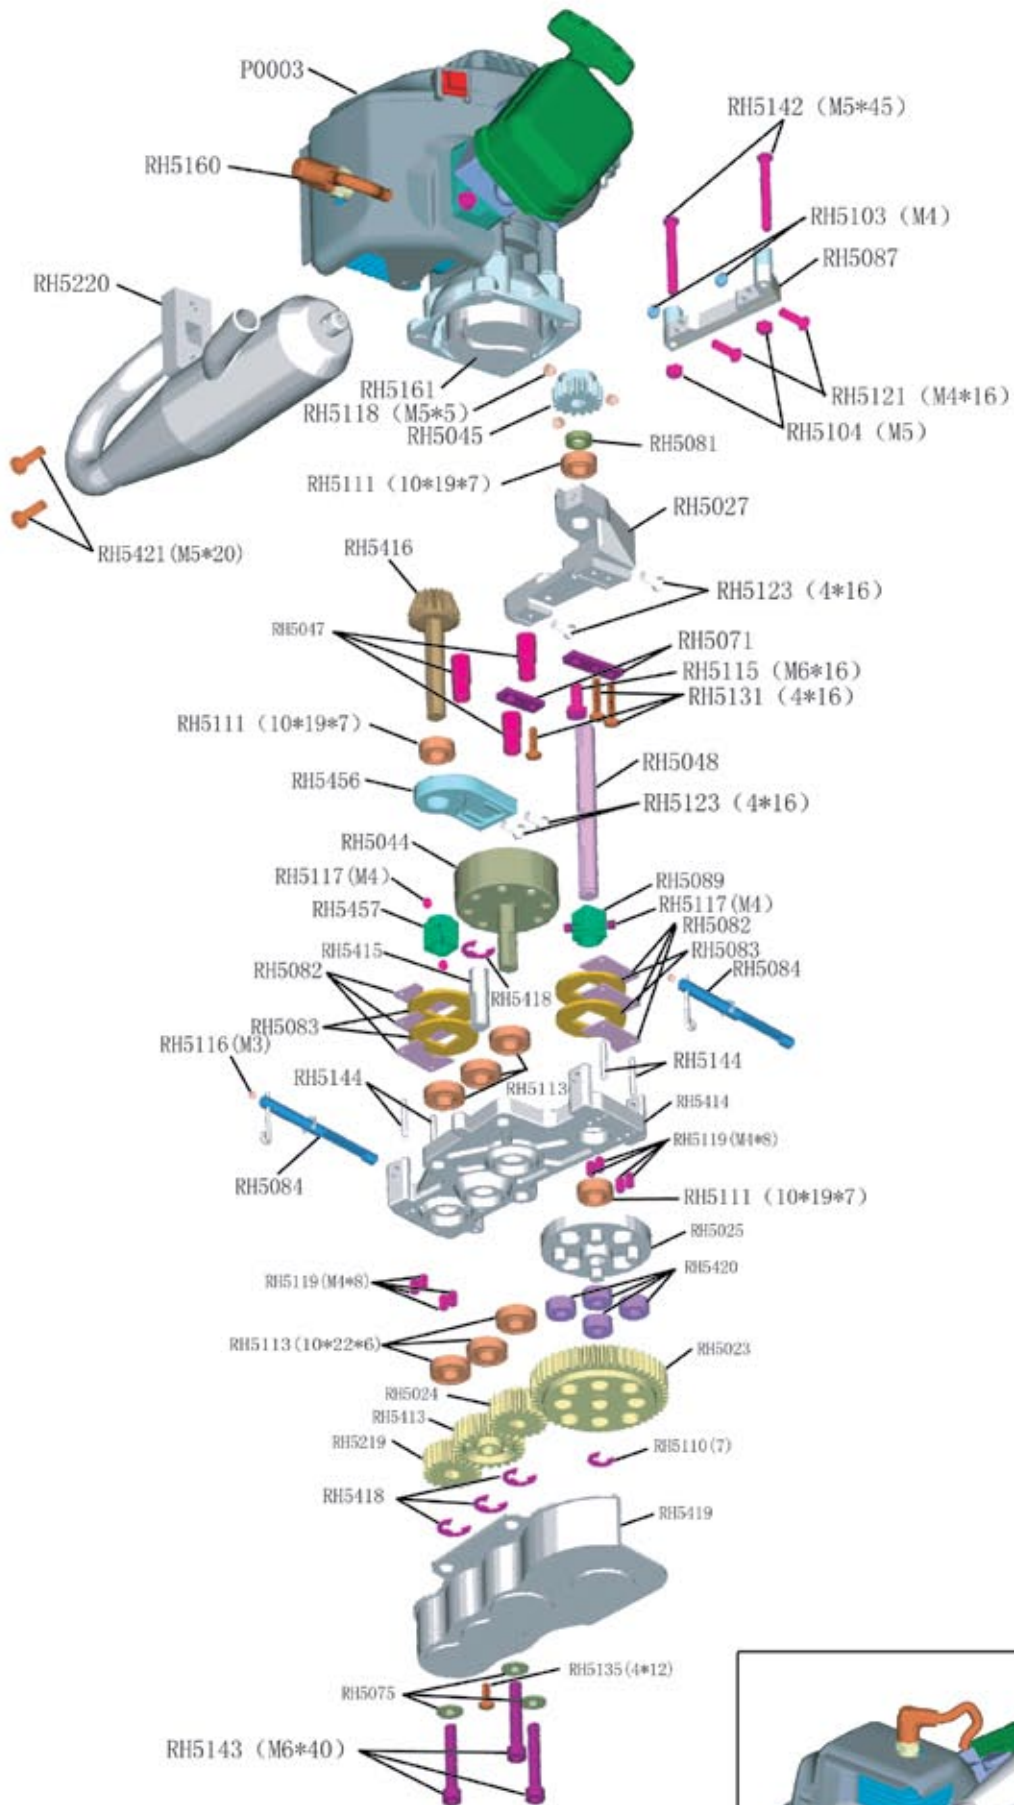 





## Блок радио

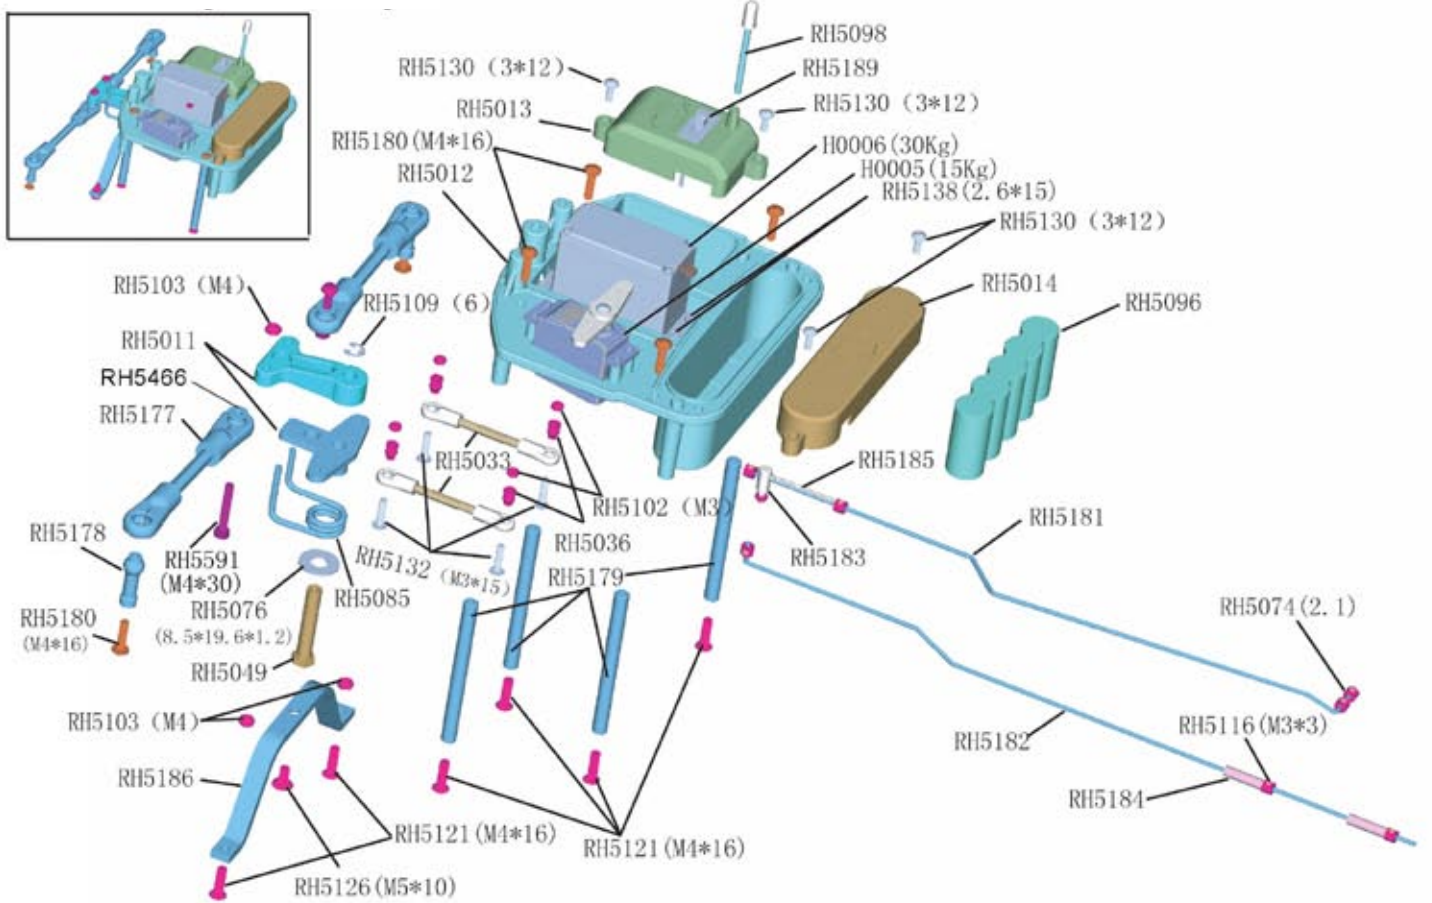 



## Крепление передней и задней подвески к раме

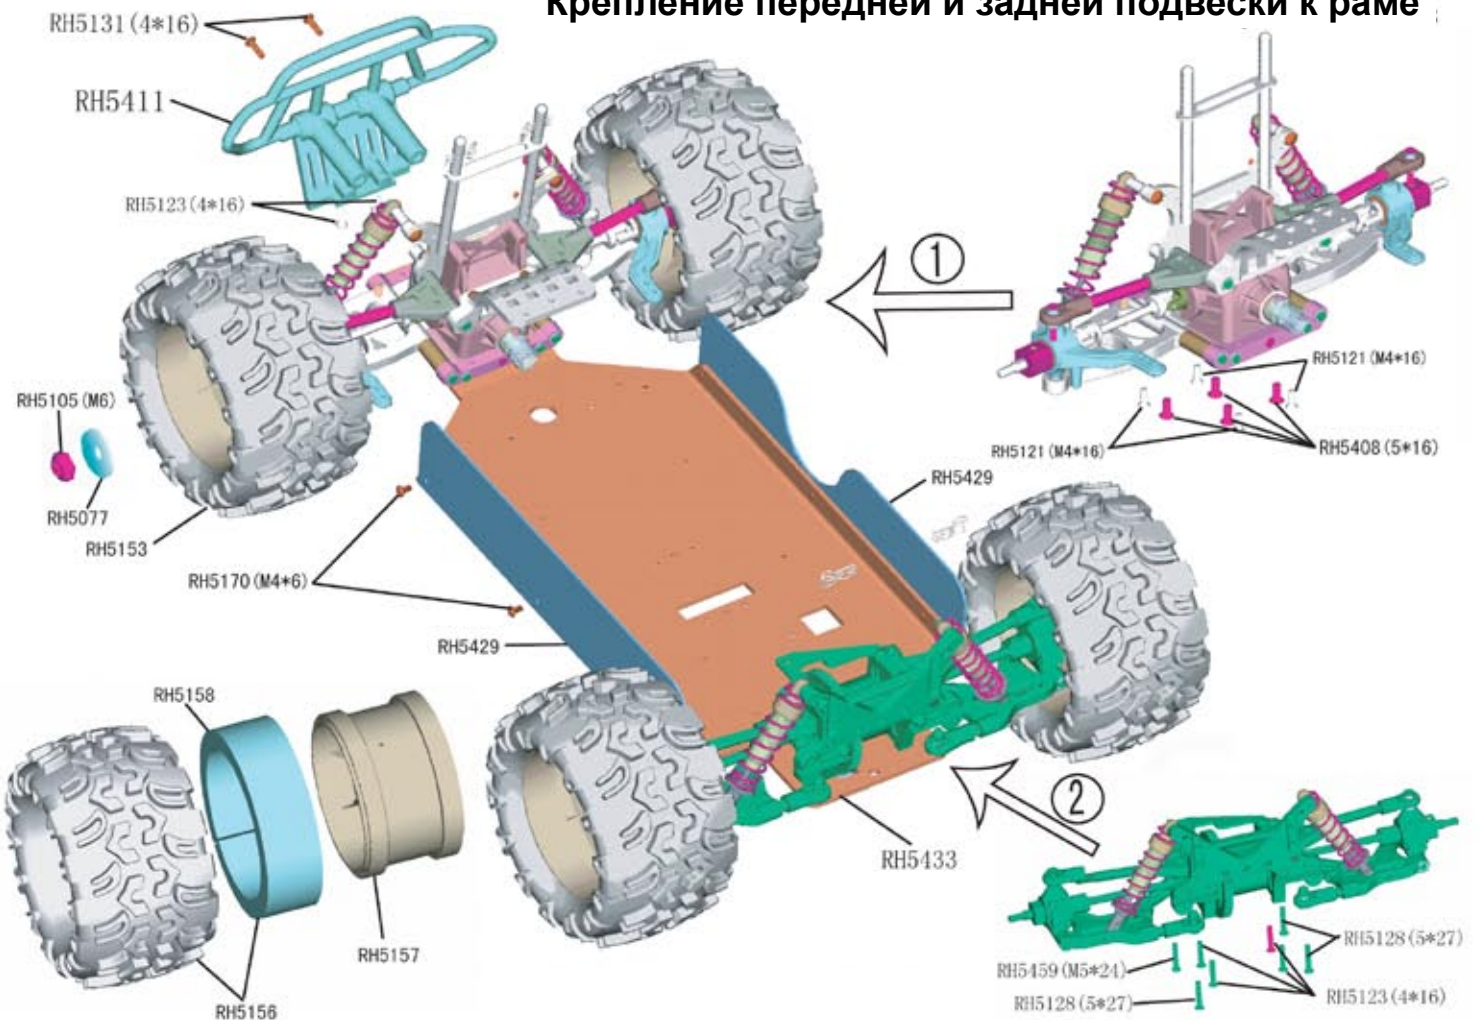 

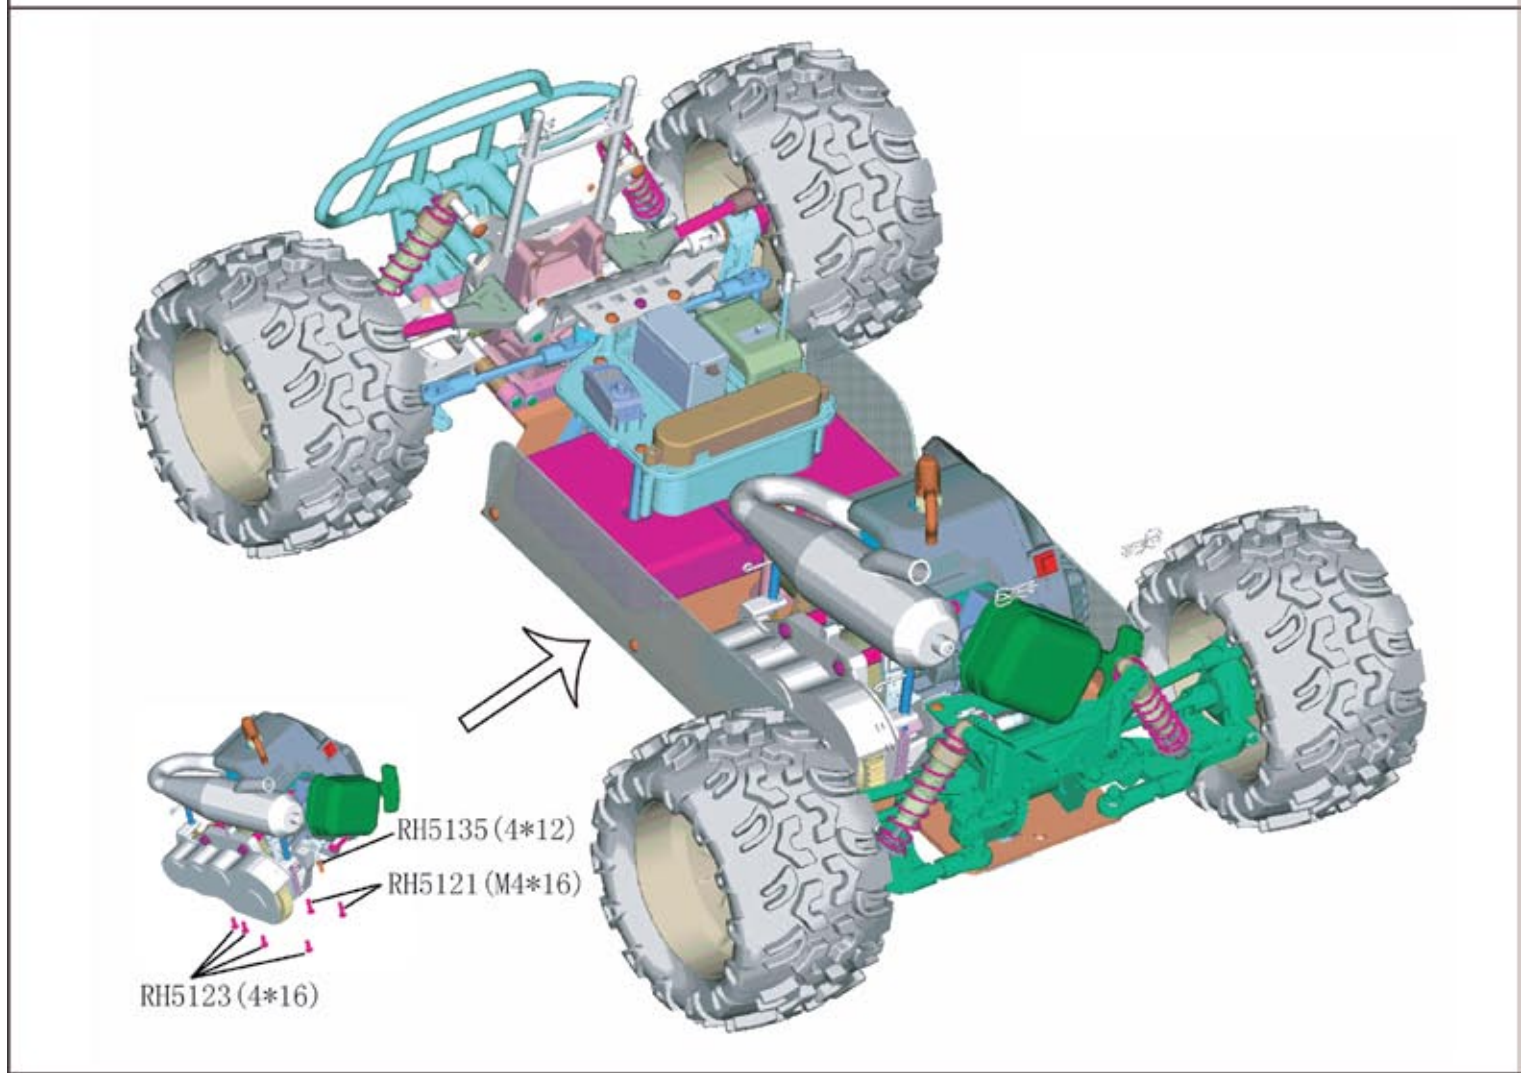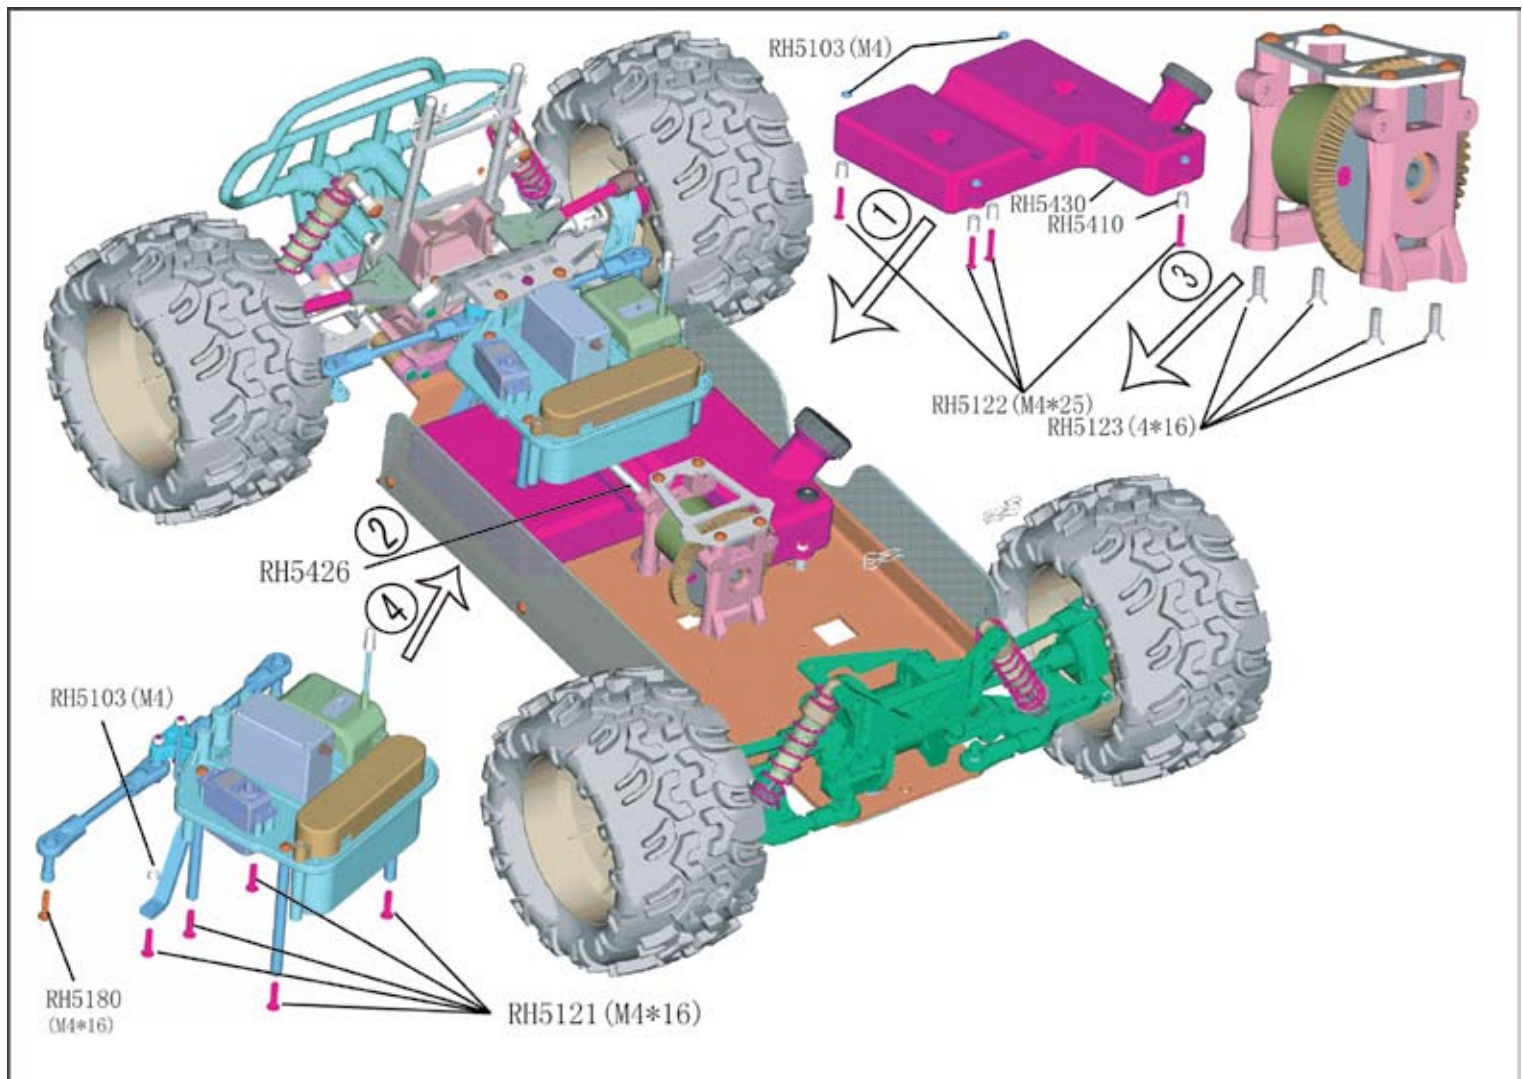  

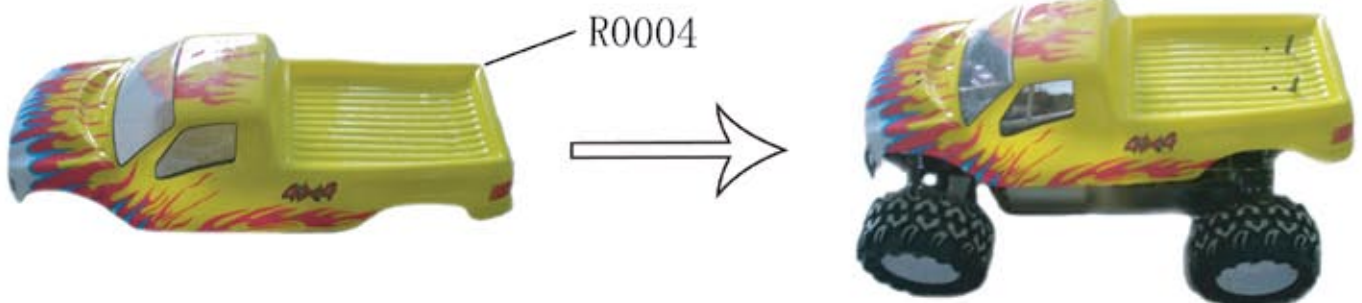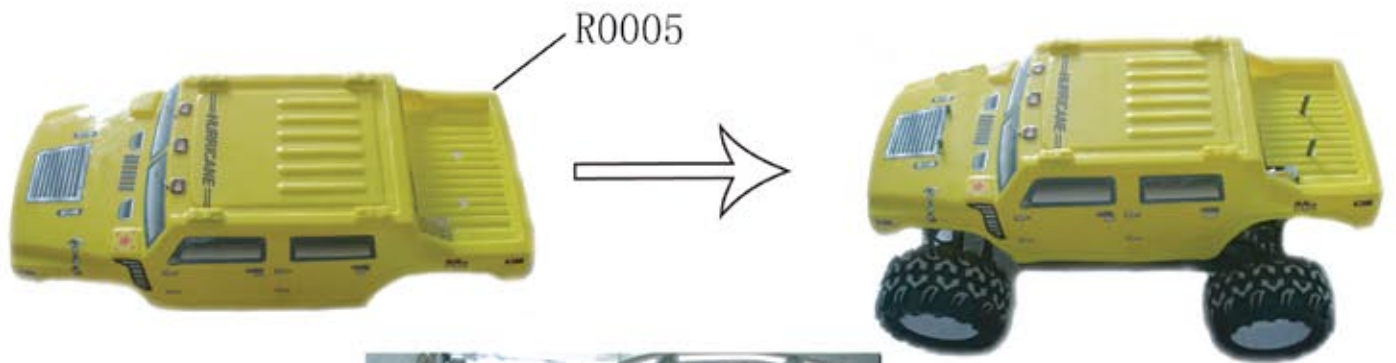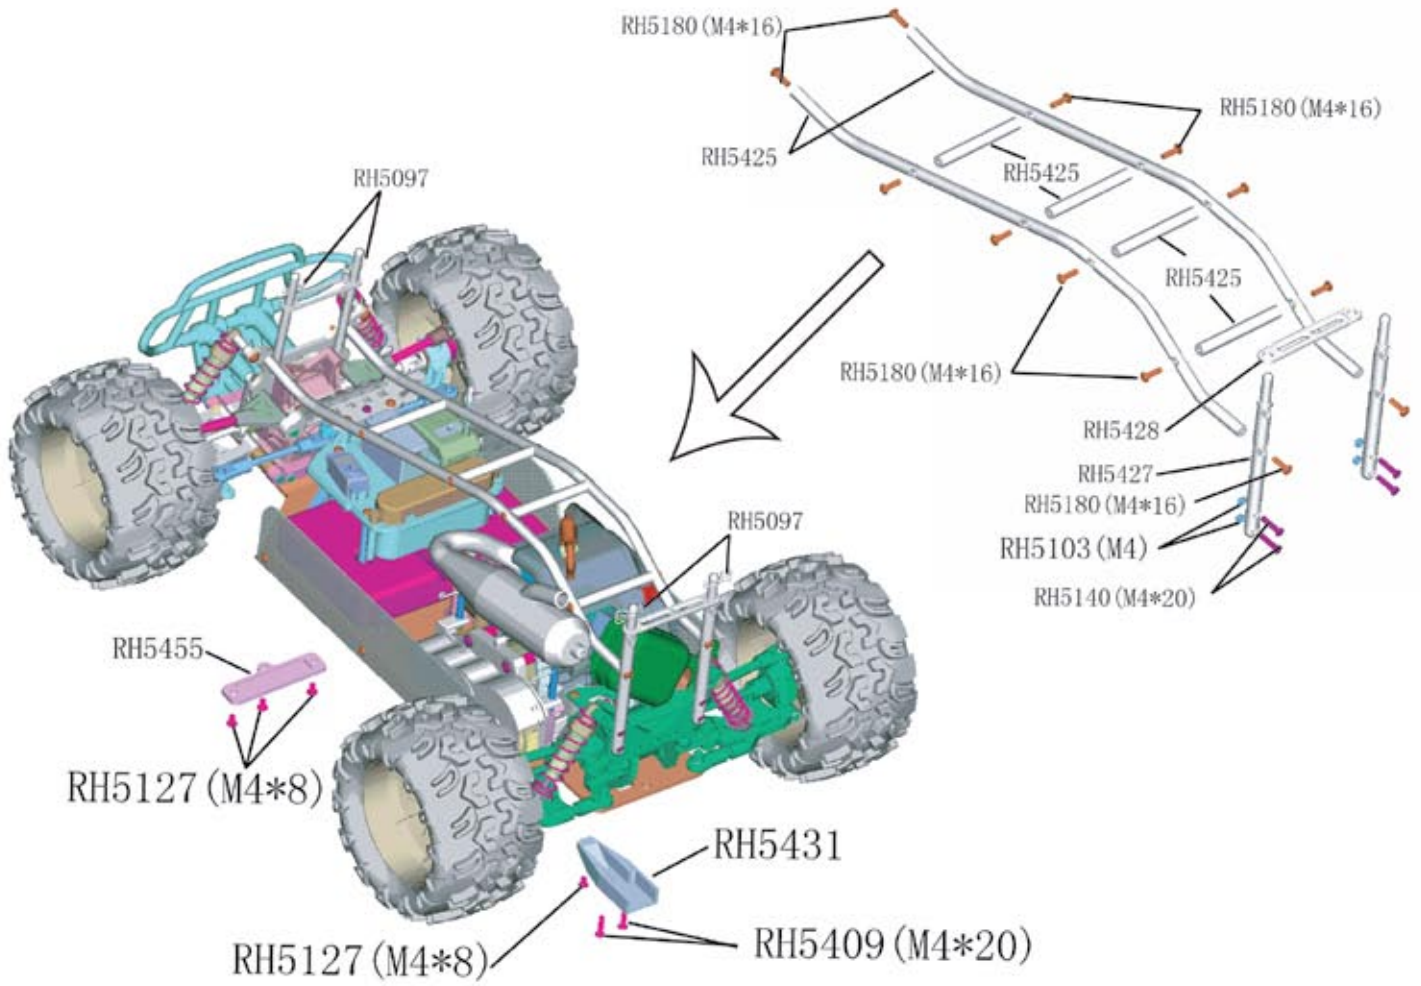   


# Дополнительные детали для Багги

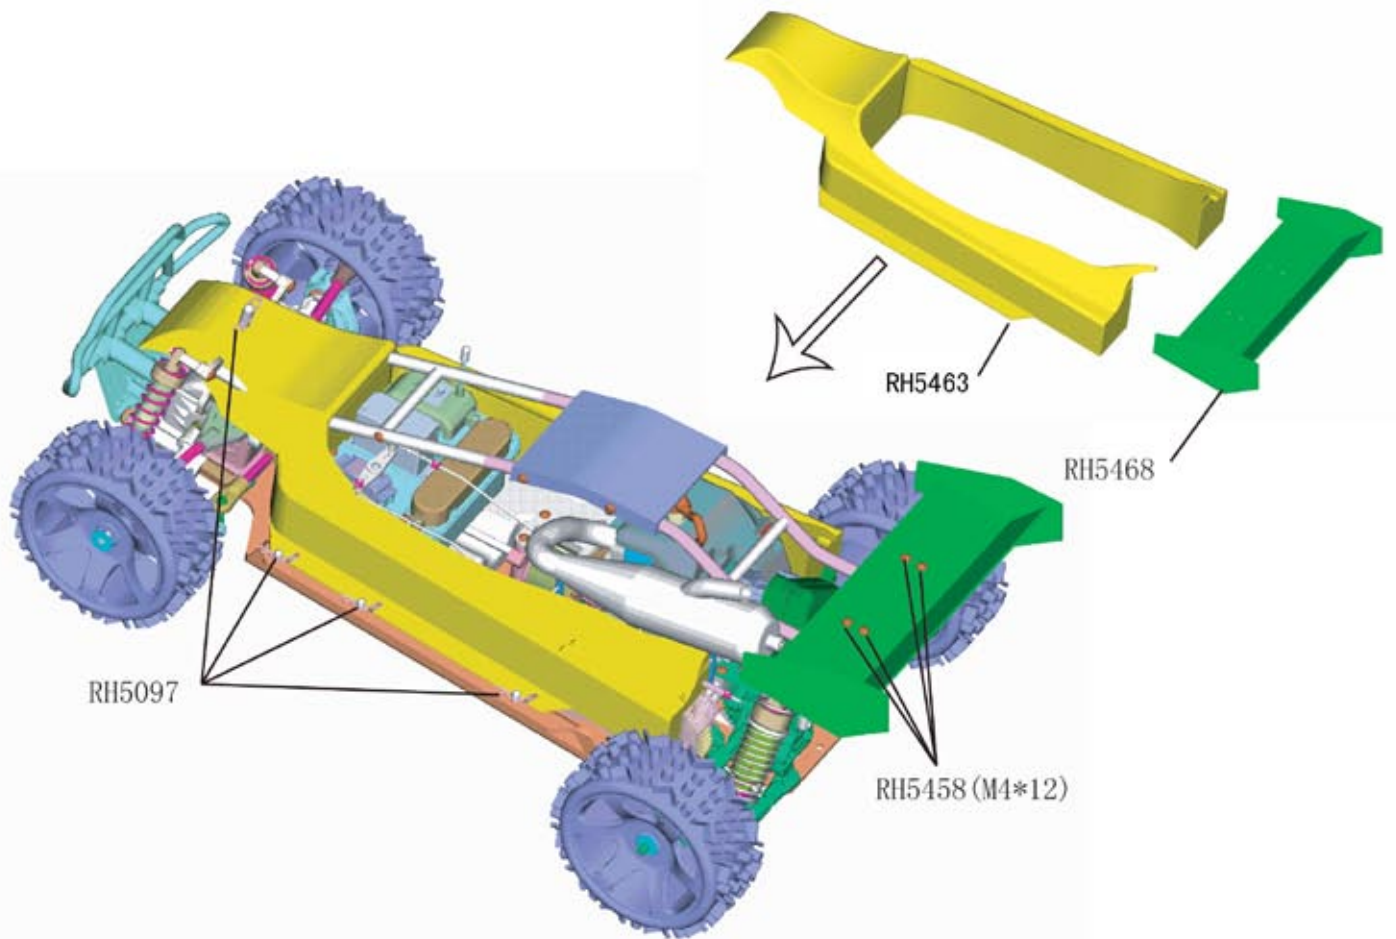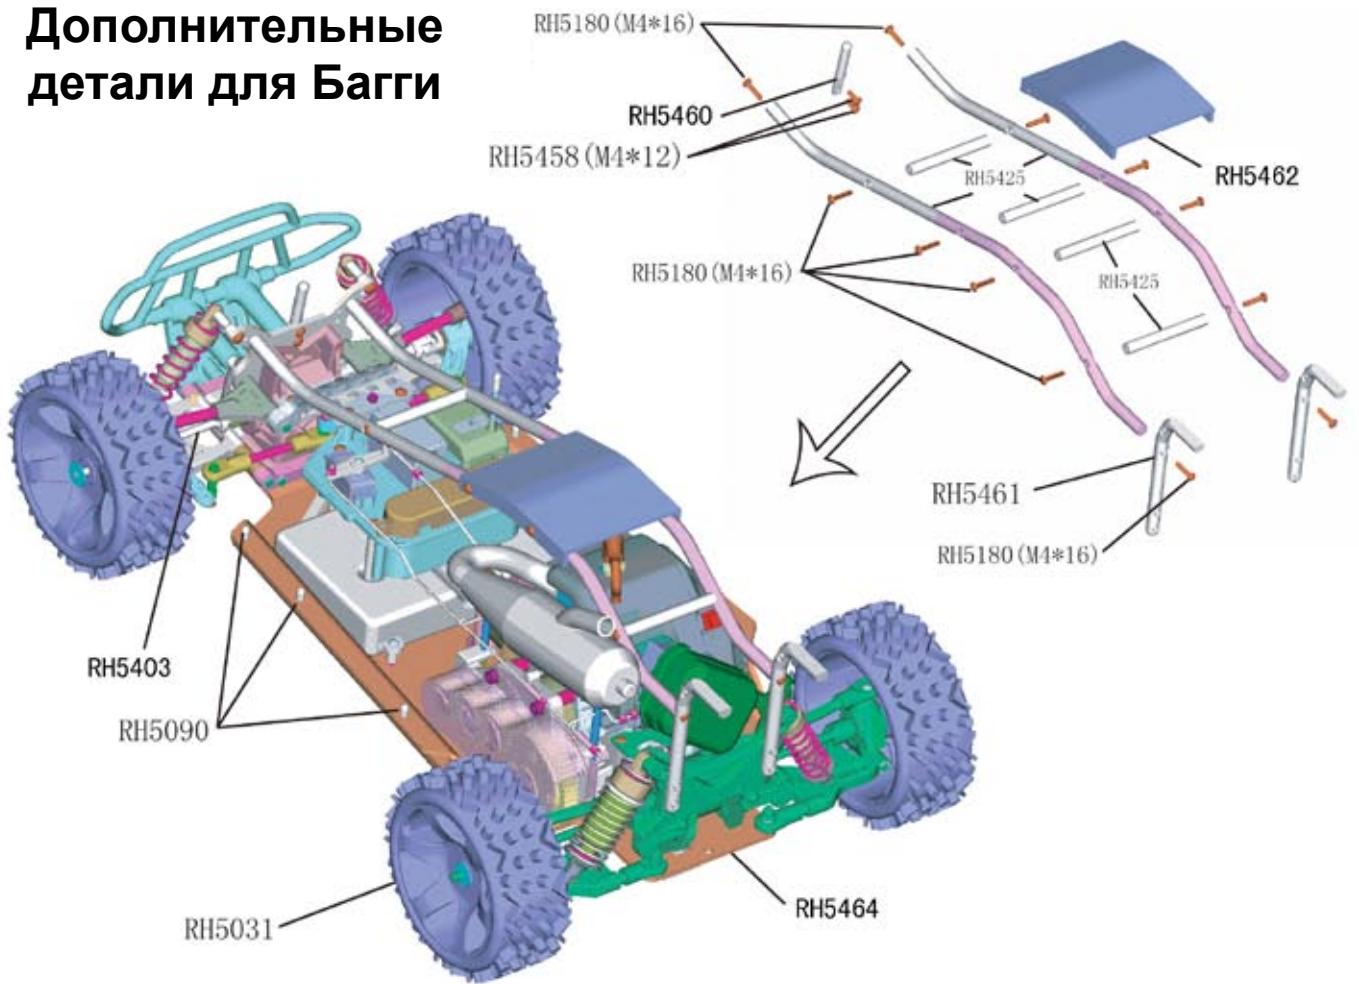  





# Модернизируйте свою машину амортизаторами большого размера RH5453 и RH5454
 
## Амортизатор передней подвески RH5453

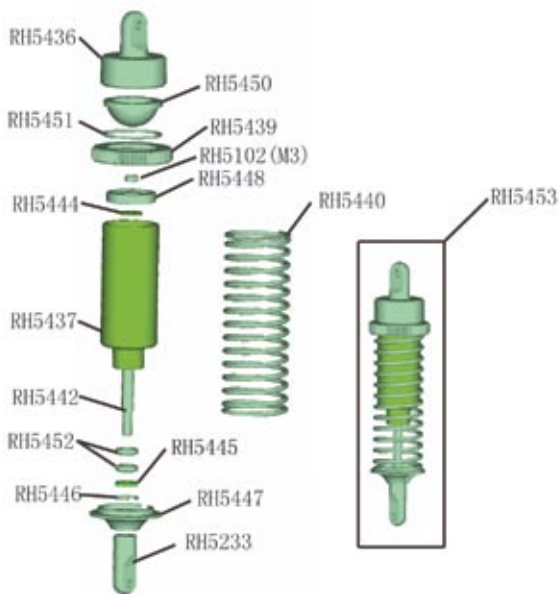

## Амортизатор задней подвески RH5454

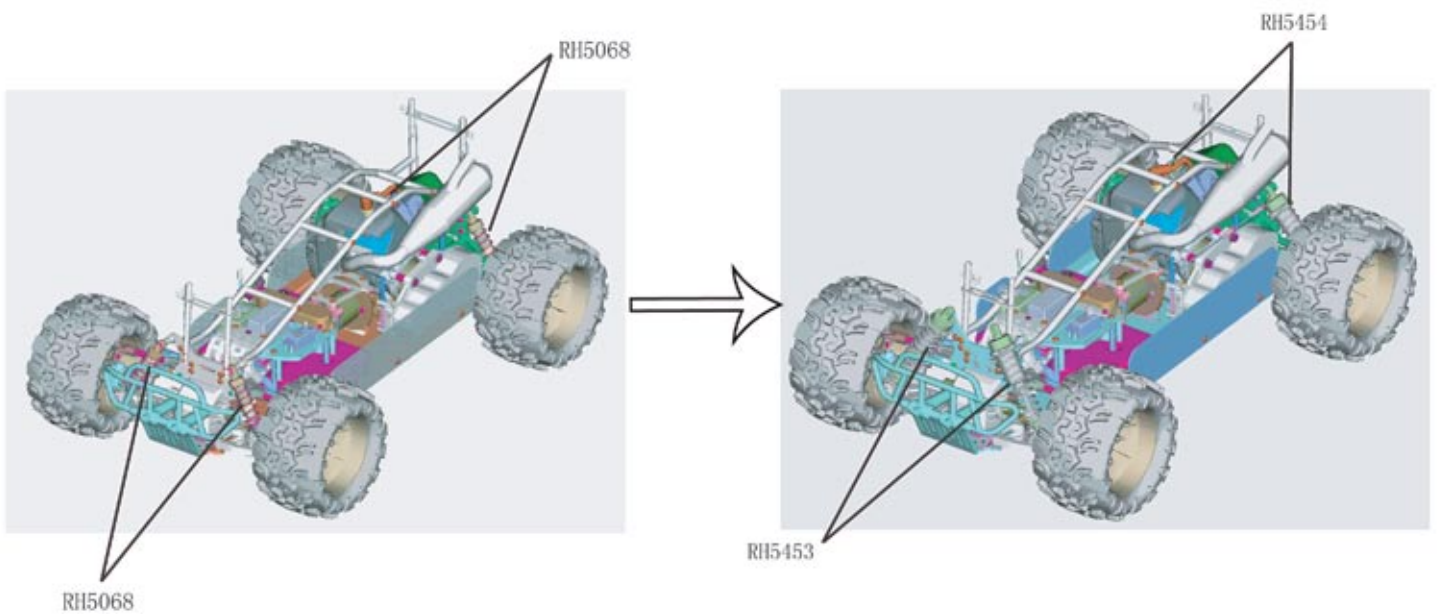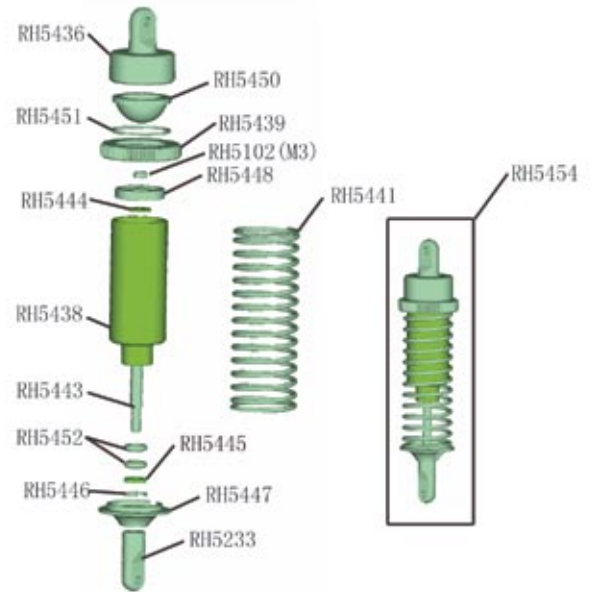  


# Бензиновый двигатель 30 см<sup>3</sup>









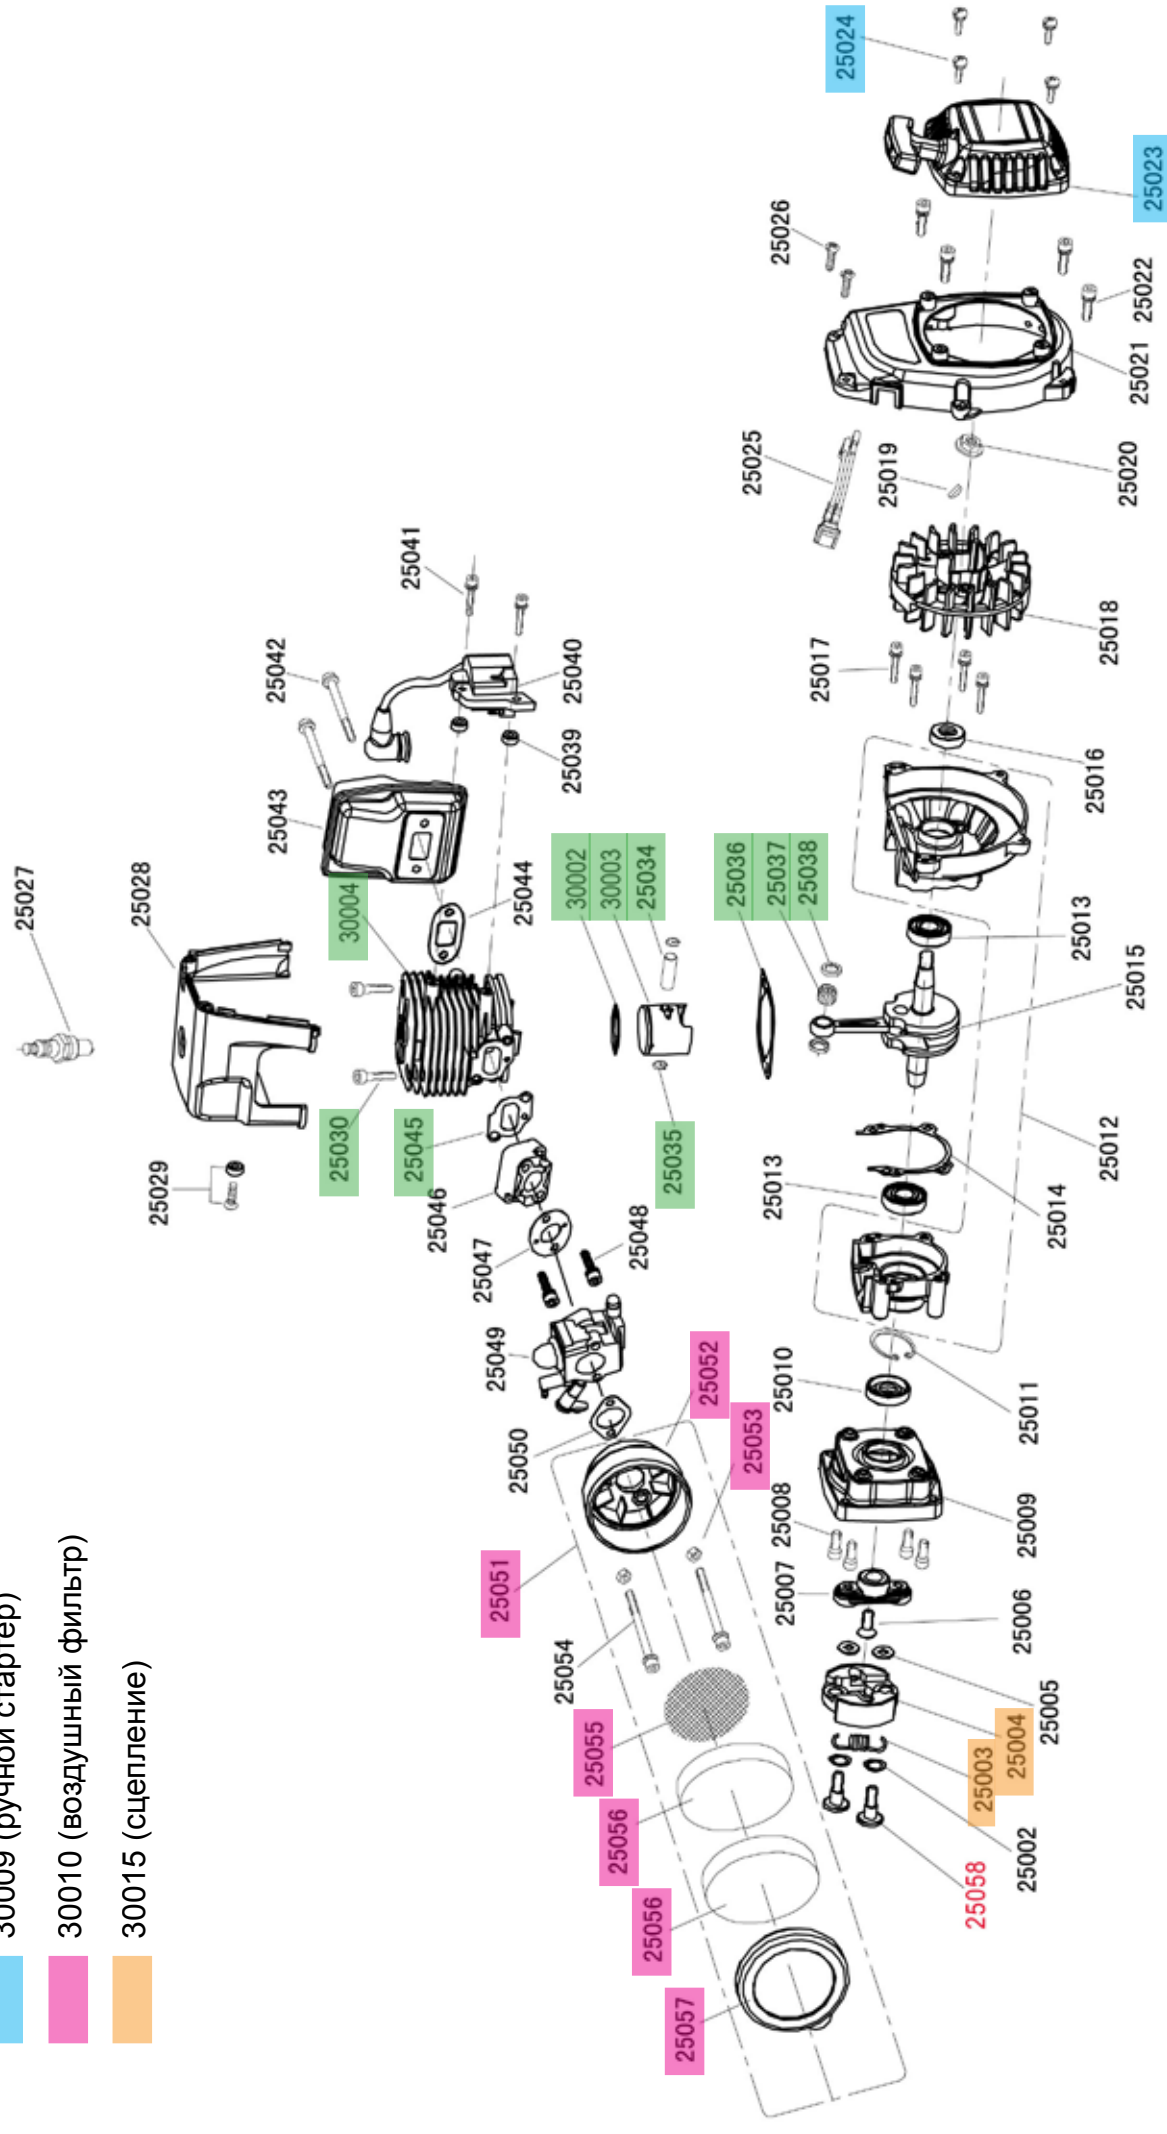 































30005 (поршневая группа)









































30009 (ручной стартёр)











30010 (воздушный фильтр)

30015 (сцепление)









 










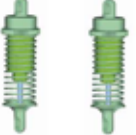




















<p>RH5002-Front Lower Susp. Arm 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5003 -Rear Lower Susp. Arm 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5004-Rear Upper Susp. Arm 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5010-Steering Arm 1set</p>  <p>(RH503/RH505)</p>	<p>RH5011-Steering Unit 1set</p>  <p>(RH503/RH505)</p>
<p>RH5012-Servo Bearer 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5013-Receiver Case 1set</p>  <p>(RH503/RH505)</p>	<p>RH5014-Battery Case 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5016-Gear Holder Unit 1set</p>  <p>(RH503/RH505)</p>	<p>RH5017-Rear Axle Sleeve Unit 1set</p>  <p>(RH503/RH505)</p>
<p>RH5018-Rear Supporting Plate 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5019-Susp Arm Fixed Holder 8pcs</p>  <p>(RH503/RH505)</p>	<p>RH5020-Diff Gearbox 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5023-Gear 48T 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5024-Gear 19T 1pc</p>  <p>(RH503/RH505)</p>
<p>RH5025-Gear Dead Plate 1set</p>  <p>(RH503/RH505)</p>	<p>RH5027-Engine Bracket Left 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5033-Connect Rod for Servo 2sets</p>  <p>(RH503/RH505)</p>	<p>RH5034-Ball End for Susp. Arm 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5035 -Steering Ball End 4pcs</p>  <p>(RH503/RH505)</p>
<p>RH5036-Ball End for Servo 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5037-Driven Diff. Gear w/Shaft 1set</p>  <p>(RH503/RH505)</p>	<p>RH5038-Drive Diff. Gear 1set</p>  <p>(RH503/RH505)</p>	<p>RH5039-Outer Diff. Case Cover 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5040-Wheel Rim Coupler Short 2pcs</p>  <p>(RH503/RH505)</p>
<p>RH5041-Rear Wheel Shaft 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5042-Diff Speed Shaft of Rear Wheel 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5044-Fly wheel 1set</p>  <p>(RH503/RH505)</p>	<p>RH5045-Gear 16T 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5047-Spacer Sleeve 1set</p>  <p>(RH503/RH505)</p>
<p>RH5048-Gear Shaft 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5049-Steering Fixed Rod 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5052-Rear Rim Fixing Shaft 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5054-Rear Upper &amp; Lower Susp. Arm Shaft 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5069-Connecting Rod for Front Upper Susp. Arm 2pcs</p>  <p>(RH503/RH505)</p>
<p>RH5071-Fixing Plate 1set</p>  <p>(RH503/RH505)</p>	<p>RH5074-Set collar 2.1 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5075-Gear case washer 3pcs</p>  <p>(RH503/RH505)</p>	<p>RH5076-Steering Rod Washer 8.5*19.6*1.2 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5077-Steering Rod Washer 6.2*18*1.5 4pcs</p>  <p>(RH503/RH505)</p>

<p>RH5078-Steering Rod Washer 8.1*12*1 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5080-Washer 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5081-Gear Bush 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5082-Brake Disc Clamp Slice 3pcs</p>  <p>(RH503/RH505)</p>	<p>RH5083-Brake disc 2pcs</p>  <p>(RH503/RH505)</p>
<p>RH5084-Brake Crank 1set</p>  <p>(RH503/RH505)</p>	<p>RH5085-Spring of Servo Saver 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5087-Engine Bracket 1set</p>  <p>(RH503/RH505)</p>	<p>RH5089-Fixed Brake Block 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5091-Oil Pipe Mounting Cover 2sets</p>  <p>(RH503/RH505)</p>
<p>RH5096-6V Battery Pack 1pcs(Optional)</p>  <p>(RH503/RH505)</p>	<p>RH5097-Big Body Pins 8pcs</p>  <p>(RH503/RH505)</p>	<p>RH5098-Antenna Pipe 4sets</p>  <p>(RH503/RH505)</p>	<p>RH5099-Oil pipe 1set</p>  <p>(RH503/RH505)</p>	<p>RH5102-Nylon Lock Nut M3 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5103-Nylon Lock Nut M4 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5104-Nylon Lock Nut M5 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5105-Nylon Lock Nut M6 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5106-Nut Cap M4 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5107-E-ring 3 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5108-E-ring 5mm 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5109-E-ring 6mm 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5110-E-ring 7mm 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5111-Ball Bearing 10*19*7 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5112-Ball Bearing 8*22*7 2pcs</p>  <p>(RH503/RH505)</p>
<p>RH5113-Ball Bearing 10*22*6 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5114-Ball Bearing 12*28*8 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5115-Outer Hex Screw M6*16 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5116-Inner Hex Grub Screw M3*3 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5117-Inner Hex Grub Screw M4*4 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5118-Grub Screw M5*5 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5119-Grub Screw M4*8 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5120-Grub Screw M5*25 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5121-FH Screw M4*16 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5122-FH Screw M4*25 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5123-FH Screw 4*16 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5126-FH Screw M5*10 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5127-FH Screw M4*8 6Pcs</p>  <p>(RH503/RH505)</p>	<p>RH5128-FH Screw M5x27 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5130-RH Self Tapping Screw 3*12 6pcs</p>  <p>(RH503/RH505)</p>

<p>RH5131-RH Screw 4*16 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5132-RH Screw M3*15 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5134-Umbrella Head Screw 3*6 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5135-RH Self Tapping Screw 4*12 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5136-RH Self Tapping Screw 4*20 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5138-Flange Head Self tapping screw M2.6*15 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5139-Shock Absorber Fixing Screw 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5140-RH Screw M4*20 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5141-RH Screw M4*27 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5142-RH Screw M4*45 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5143-RH Screw M6*40 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5144-Fixed Pin of Brake Slice Unit 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5153-Tire Units 2sets</p>  <p>(RH503)</p>	<p>RH5156-Tire and Sponge 2sets</p>  <p>(RH503)</p>	<p>RH5157-Wheel Rim 2pcs</p>  <p>(RH503)</p>
<p>RH5158-Truck Tire Sponge 2pcs</p>  <p>(RH503)</p>	<p>RH5160-Spark Plug 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5161-Clutch Assy 1set</p>  <p>(RH503/RH505)</p>	<p>RH5163-Wheel Rim Coupler Long 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5170-RH Self Tapping Screw M4*6 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5171-Central Trans- Mission Drive Cup 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5172-Bracket for Central Trans. Drive Cup 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5173-Central Trans- mission Upper Deck 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5174-Central Gear Bracket 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5175-Gear 56T 1pcs</p>  <p>(RH503/RH505)</p>
<p>RH5176-FH Screw M4*106pcs</p>  <p>(RH503/RH505)</p>	<p>RH5177-Steering Linkage 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5178-Steering Post 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5179-Radio Tray Post 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5180-RH Screw M4*16 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5181-Throttle Linkage Rod 1set</p>  <p>(RH503/RH505)</p>	<p>RH5182-Brake Linkage Rod 1set</p>  <p>(RH503/RH505)</p>	<p>RH5183-Brake Post 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5184-Brake Tube 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5185-Throttle Spring 2pcs</p>  <p>(RH503/RH505)</p>
<p>RH5186-Steering Fixed Rod Holder 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5189-Receiver Switch</p>  <p>(RH503/RH505)</p>	<p>RH5190-E-ring M4 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5191-Lower Susp. Arm Bracket 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5192-Shock Upper holder 2pcs</p>  <p>(RH503/RH505)</p>

<p>RH5193-Shock Lower Holder 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5194-Linkage Rod 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5195-Pin for Front Upper Sus. Arm 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5196-Pin for Lower Susp. Arm Bracket 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5197-Pin for Front Lower Sus. Arm 2pcs2P</p>  <p>(RH503/RH505)</p>
<p>RH5198-Front Bulkhead 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5199-Front Diff Drive Cup 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5400-Gear Box Housing 1set</p>  <p>(RH503/RH505)</p>	<p>RH5401-Diff. Bevel Gear B. 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5402-Diff. Bevel Gear S. 1pcs</p>  <p>(RH503/RH505)</p>
<p>RH5403-CVD 2sets</p>  <p>(RH503-truck)</p>	<p>RH5404-Front Shock Tower 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5405-Front Body Mounts 2pcs</p>  <p>(RH503-truck)</p>	<p>RH5406-Front Body Mount Fix Plate 1pcs</p>  <p>(RH503-truck)</p>	<p>RH5407-BH Screw M5*15 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5408-FH Screw 5*16 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5409-FH Screw M4*20 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5410-Fuel Tank Mount 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5411-Front Bumper 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5413-Gear 24T 1pcs</p>  <p>(RH503/RH505)</p>
<p>RH5414-Gear Mount 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5415-Gear Shaft 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5416-Gear 19T 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5417-RH Screw 4*23 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5418-Clip 4pcs</p>  <p>(RH503/RH505)</p>
<p>RH5419-Gear Cover 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5420-Spacer 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5421-RH Screw M5*20 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5422-Rear Dogbones 2pcs</p>  <p>(RH503/RH505)</p>	<p>RH5423-Rear Locating Plate 1pc</p>  <p>(RH503/RH505)</p>
<p>RH5424-Gear 51T 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5425-Plastic Roll Bar 1set</p>  <p>(RH503/RH505)</p>	<p>RH5426-Central Diff. Trans. Shaft 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5427-Rear Body Post 2pcs</p>  <p>(RH503-truck)</p>	<p>RH5428-Rear Body Mount Fix Plate 1pc</p>  <p>(RH503/RH505)</p>
<p>RH5429-Side Plate 1set</p>  <p>(RH503-truck)</p>	<p>RH5430-Fuel Tank 1set</p>  <p>(RH503/RH505)</p>	<p>RH5431-Gear Cover 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5432-Wrench 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5433-Chassis Plate 1pc</p>  <p>(RH503-truck)</p>

<p>RH5434-FH Screw 4*25 6pcs</p>  <p>(RH503/RH505)</p>	<p>RH5435-Manual 1pcs</p>  <p>(RH503/RH505)</p>	<p>RH5436-Upper cover of shock absorber 4P</p>  <p>(RH503/RH505)</p>	<p>RH5437-Shock absorber Cylinder 2P</p>  <p>(RH503/RH505)</p>	<p>RH5438-Shock absorber Cylinder 2P</p>  <p>(RH503/RH505)</p>
<p>RH5439-Adjusting ring for shock absorber 4P</p>  <p>(RH503/RH505)</p>	<p>RH5440-Shock absorber spring 2P</p>  <p>(RH503/RH505)</p>	<p>RH5441-Shock absorber spring 2P</p>  <p>(RH503/RH505)</p>	<p>RH5442-Axle for shock absorber 2P</p>  <p>(RH503/RH505)</p>	<p>RH5443-Axle for shock absorber 2P</p>  <p>(RH503/RH505)</p>
<p>RH5444-Shocks Detroit Gasket absorbers 4P</p>  <p>(RH503/RH505)</p>	<p>RH5445-Spacer for Shock Absorbers 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5446-Shock Absorber Clip 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5447-Fixing spring of shock absorber 4P</p>  <p>(RH503/RH505)</p>	<p>RH5448-Piston of shock absorber 4P</p>  <p>(RH503/RH505)</p>
<p>RH5449-Shock absorbers under the support 2P</p>  <p>(RH503/RH505)</p>	<p>RH5450-Sealing cap of shock absorber 4P</p>  <p>(RH503/RH505)</p>	<p>RH5451-Shock absorbers o-ring 4pcs</p>  <p>(RH503/RH505)</p>	<p>RH5452-Shock Absorbers O-ring 8pcs</p>  <p>(RH503/RH505)</p>	<p>RH5453-Shock absorber units 2set</p>  <p>(RH503/RH505)</p>
<p>RH5454-Shock absorber units 2set</p>  <p>(RH503/RH505)</p>	<p>RH5455-Gear cover 1P</p>  <p>(RH503/RH505)</p>	<p>RH5456-Gear stent in poor Xiaosan 1P</p>  <p>(RH503/RH505)</p>	<p>RH5457-Fixed brake block 1P</p>  <p>(RH503/RH505)</p>	<p>RH5458-RH Screw M4*12 6pcs</p>  <p>(RH503/RH505)</p>
<p>RH5459-FH Screw M5*24 6pcs</p>  <p>(RH503/RH505)</p>	<p>H0005-Throttle Servo 15kg/cm 1pcs</p>  <p>(RH503/RH505)</p>	<p>H0006-Steering Servo 30kg/cm 1pc</p>  <p>(RH503/RH505)</p>	<p>R0004-Printed Body 1pc</p>  <p>(RH503-truck)</p>	<p>R0005-Printed Body 1pc</p>  <p>(RH503-truck)</p>
<p>R0009-Fail safe 1P</p>  <p>(RH503/RH505)</p>	<p>P0002-CY27cc Engine 1pc</p>  <p>(RH503/RH505)</p>	<p>P0003-CY29cc Engine 1pc</p>  <p>(RH503/RH505)</p>	<p>RH5466-Steering Ball End 4P</p>  <p>(RH503/505)</p>	<p>RH5467-Diff output shaft 2pcs</p>  <p>(RH503/505)</p>

<p>RH5031-Tire units 2set</p>  <p>(RH505-buggy)</p>	<p>RH5090-Body fixed screws 6P</p>  <p>(RH505-buggy)</p>	<p>RH5460-Front body shell bracket 1P</p>  <p>(RH505-buggy)</p>	<p>RH5461-Rear body across supporting right 2P</p>  <p>(RH505-buggy)</p>	<p>RH5462-Chepeng protection board 1P</p>  <p>(RH503/RH505)</p>
<p>RH5463-Body shell 1P</p>  <p>(RH505-buggy)</p>	<p>RH5464-Chassis 1P</p>  <p>(RH505-buggy)</p>	<p>RH5465-Universal dog bone 2set</p>  <p>(RH505-buggy)</p>	<p>RH5467-Diff speed shaft of rear wheel 2P</p>  <p>(RH503/RH505)</p>	<p>RH5468-Truggy wing 1P</p>  <p>(RH505-buggy)</p>
<p>RH5056-Shock absorber spacer sleeve 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5057-Upper bearer of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5058-Upper cover of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5059-Adjusting ring for shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5060-Fixing spring of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>
<p>RH5061-Sealing cap of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5062-Piston of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5064-Shock absorber cylinder 2PCS</p>  <p>(RH503/RH505)</p>	<p>RH5065-Lower bearer for shock absorber 4SET</p>  <p>(RH503/RH505)</p>	<p>RH5068-Shock absorber units 2set</p>  <p>(RH503/RH505)</p>
<p>RH5146-Axle for shock absorber 2PCS</p>  <p>(RH503/RH505)</p>	<p>RH5165-Shock absorber card central 0-ring 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5166-Shock absorber on the 0-ring 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5167-Coper set of shock absorber 4PCS</p>  <p>(RH503/RH505)</p>	<p>RH5168-Shock absorber card ring 4PCS</p>  <p>(RH503/RH505)</p>
<p>RH5169-Shock absorber spring 2PCS</p>  <p>(RH503/RH505)</p>				



# Upgrade

<p>RH5201-Rear Supporting Plate 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5202-Gear Fixing Plate 1PCS</p>  <p>(RH501/RH502)</p>	<p>RH5203-Gear Holder L/R 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5204-Front Lower Back Supporting Plate 1PCS</p>  <p>(RH501/RH502)</p>	<p>RH5205-Front Lower Supporting Plate 1PCS</p>  <p>(RH501/RH502)</p>
<p>RH5206-Steering Units 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5207-Engine Bracket Left 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5208-Front Lower Susp. Arm 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5209-Steering Arms 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5210-Front Body Shell Bracket 1set</p>  <p>(RH501)</p>
<p>RH5211-Rear Upper Susp. Arm 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5212-Rear lower Susp. Arm 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5213-Gear Dead Plate 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5214-Diff Gear Box 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5215-Front Upper Susp. Arm 1PCS</p>  <p>(RH501/RH502)</p>
<p>RH5216-Front Upper Supporting Plate 1PCS</p>  <p>(RH501/RH502)</p>	<p>RH5217-Rear Axle Sleeve Unit 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5218-Gear 48T 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5219-Gear 19T 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5220-Alum Muffler 1PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>
<p>RH5221-Full Front Disc Brake 1set</p>  <p>(RH501/RH502)</p>	<p>RH5222-Air Cleaner 1set</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5223-Chassis 1PCS</p>  <p>(RH501)</p>	<p>RH5224-Chromed Buggy Rims 2PCS</p>  <p>(RH501/RH505)</p>	<p>RH5225-Chromed Truck Rims 2PCS</p>  <p>(RH502/RH503)</p>
<p>RH5226-Front Body Shell Bracket 1set</p>  <p>(RH502 Meet R0004)</p>	<p>RH5227-Rear Body Across Supporting Right 1set</p>  <p>(RH502 Meet R0004)</p>	<p>RH5228-Gear Fixing Plate 1PCS</p>  <p>(RH503/RH505)</p>	<p>RH5229-Front The Balance Board 1PCS</p>  <p>(RH503/RH505)</p>	<p>RH5230-Shock Absorbers Under The Support 2PCS</p>  <p>(RH503/RH505)</p>
<p>RH5231-Center Gear Box seat 2PCS</p>  <p>(RH503/RH505)</p>	<p>RH5232-Shock Absorbers Under The Support 2PCS</p>  <p>(RH503/RH505)</p>	<p>RH5233-Lower Bearer For Shock Absorber 4PCS</p>  <p>(RH501/RH502/RH503/RH505)</p>	<p>RH5234-Upper Bearer Of Shock Absorber 4PCS</p>  <p>(RH501/RH502)</p>	<p>RH5235-Gear stent in poor Xiaosan 1P</p>  <p>(RH503/RH505)</p>